

SAMSUNG

SAMSUNG Home Appliance Service

***SERVICE* Manual**

SAMSUNG


ELECTRONICS

SERVICE DIVISION
400 Valley Road, Suite 201
Mt. Arlington, NJ 07856
1-800-SAMSUNG(1-800-726-7864)
www.samsungasc.com

– This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International and/or domestic law. –

© Samsung Electronics Co., Ltd.
Refrigerator Division 2003. 05
Printed in Korea
Code No : DA68-01130B

Bottom-Mounted Freezer

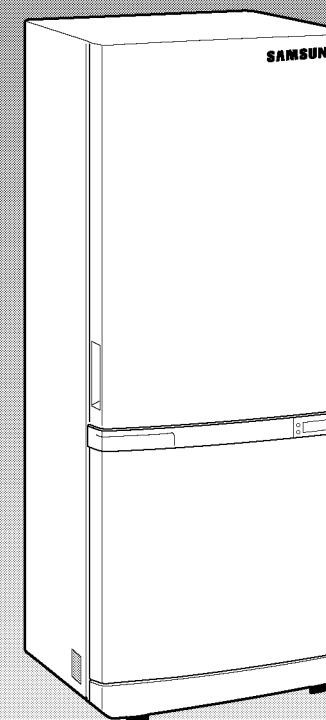

Model:
RB1844SW
RB1844SL
RB2044SW
RB2044SL



WARNING

IMPORTANT SAFETY NOTICE

The service guide is for service men with adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or dealer cannot be responsible for the interpretation of this information.

SAMSUNG ELECTRONICS AMERICA, INC.

Technical Service Guide

Copyright ©2003

All rights reserved. This service guide may not be reproduced in whole or in part in any form without written permission from the SAMSUNG ELECTRONICS Company.

1. Installation 4

2. Nomenclature 4

3. Product Specifications 5

4. Electrical part specifications & standard 5

5. Warranty information 7

6. Interior Views and Dimensions 8

7. Refrigeration Cycle and Cool Air Circulation Route 10

8. Mechanical Disassembly 12

9. Operation Function 19

10. Circuit Descriptions 26

11. Diagnostics 34

12. Illustrated Parts Catalog 48

13. Safety instruction on services 56

• Appendix I (Reference for circuit diagnostics) 57

• Appendix II (Circuit diagram) 61


1. INSTALLATION




- 1) To protect refrigerator in movement
Use padded hand truck from side only.
- 2) Remove all protective tape and pad from the refrigerators.
Connect power cord. Adjust the clearance between the doors.
- 3) Temperature controls are preset in the factory for recommended settings.
The refrigerator should run smoothly and lower the temperature gradually.
- 4) Once the refrigerator temperature is sufficiently low
It is recommended to store foods in the refrigerator.
It takes a few hours to reach the preset temperatures.

2. NOMENCLATURE

2003 Models

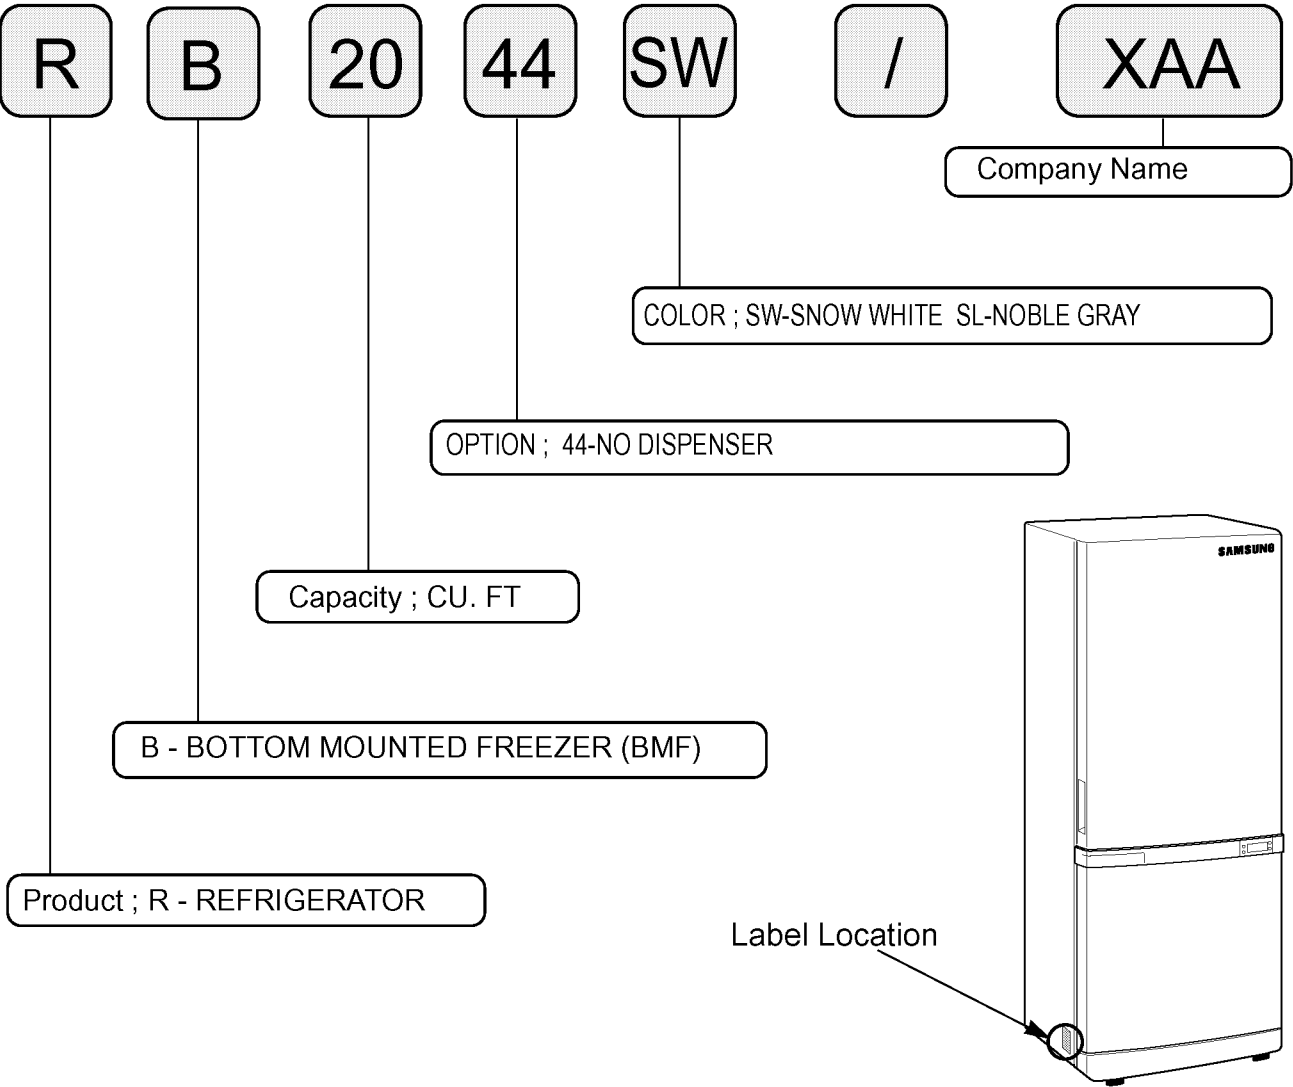

11. PCB Circuit Diagram

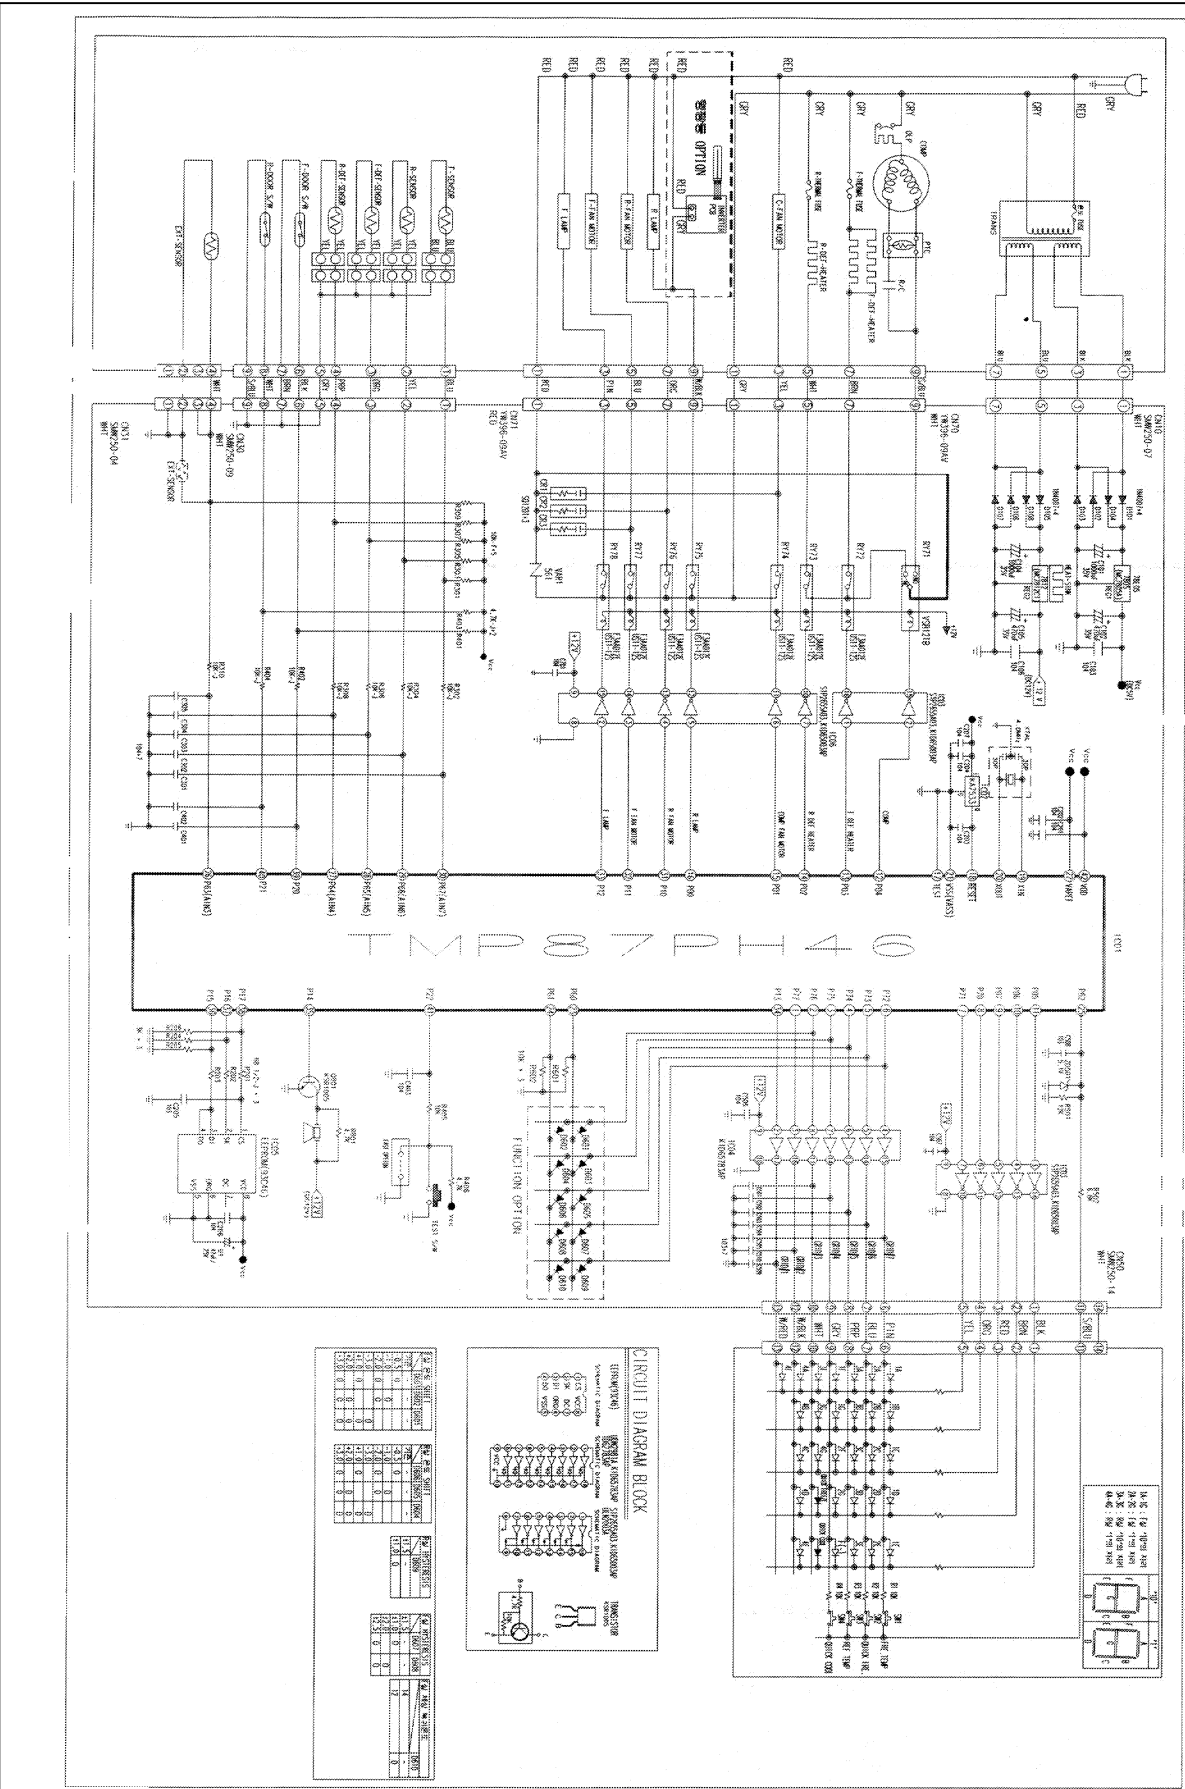

Ref. 7) Table of temperature sensor according to resistance and voltage conversion.

* Voltage conversion table depends on H/W structure of MICOM port input voltage.

Sensor Short : Micom 0V.
Sensor Open : Micom 5V.

※ Sensor partial pressure resistance 10KΩ

Temp.(°F)	Resistance(Ω)	Voltage(V)	Temp.(°F)	Resistance(Ω)	Voltage(V)	Temp.(°F)	Resistance(Ω)	Voltage(V)
-43.6	98870	4.541	12.2	21410	3.408	68.0	6013	1.878
-41.8	93700	4.518	14.0	20480	3.360	69.8	5792	1.834
-40.0	88850	4.494	15.8	19580	3.310	71.6	5581	1.791
-38.2	84150	4.469	17.6	18730	3.260	73.4	5379	1.749
-36.4	79800	4.443	19.4	17920	3.209	75.2	5185	1.707
-34.6	75670	4.416	21.2	17160	3.159	77.0	5000	1.667
-32.8	71800	4.389	23.0	16430	3.108	78.8	4821	1.626
-31.0	68150	4.360	24.8	15740	3.057	80.6	4650	1.587
-29.2	64710	4.331	26.6	15080	3.006	82.4	4487	1.549
-27.4	61480	4.301	28.4	14450	2.955	84.2	4329	1.511
-25.6	58430	4.269	30.2	13860	2.904	86.0	4179	1.474
-23.8	55550	4.237	32.0	13290	2.853	87.8	4033	1.437
-22.0	52840	4.204	33.8	12740	2.801	89.6	3894	1.401
-20.2	50230	4.170	35.6	12220	2.750	91.4	3760	1.366
-18.4	47770	4.134	37.4	11720	2.698	93.2	3631	1.332
-16.6	45450	4.098	39.2	11250	2.647	95.0	3508	1.298
-14.8	43260	4.061	41.0	10800	2.596	96.8	3390	1.266
-13.0	41190	4.023	42.8	10370	2.545	98.6	3276	1.234
-11.2	39240	3.985	44.6	9959	2.495	100.4	3167	1.203
-9.4	37390	3.945	46.4	9569	2.445	102.2	3062	1.172
-7.6	35650	3.905	48.2	9195	2.395	104.0	2962	1.143
-5.8	33990	3.863	50.0	8839	2.3462	105.8	2864	1.113
-4.0	32430	3.822	51.8	8494	.296	107.6	2770	1.085
-2.2	30920	3.778	53.6	8166	2.248	109.4	2680	1.057
-0.4	29500	3.734	55.4	7852	2.199	111.2	2593	1.030
1.4	28140	3.689	57.2	7552	2.151	113.0	2510	1.003
3.2	26870	3.644	59.0	7266	2.104	114.8	2429	0.977
5.0	25650	3.597	60.8	6992	2.057	116.6	2352	0.952
6.8	24510	3.551	62.6	6731	2.012	118.4	2278	0.928
8.6	23420	3.504	64.4	6481	1.966	120.2	2206	0.904
10.4	22390	3.456	66.2	6242	1.922			

3. PRODUCT SPECIFICATIONS

Model		RB1844SW	RB1844SL	RB2044SW	RB2044SL
Type		BMF 2 Door			
Temperature control		Electronic control			
Net Capacity (ft ³)	Total	18.7	18.7	20.4	20.4
	Freezer	5.9	5.9	6.5	6.5
	Refrigerator	12.8	12.8	13.9	13.9
Net dimension (W x D x H)		32.3 x 28.3 x 69.9		32.3 x 30.3 x 69.9	
Foam	Cabinet insulation	CYCLO-PENTANE			
	Door insulation	CYCLO-PENTANE			
Liner	Cabinet	A.B.S			
	Door	A.B.S			
Net weight(lb)		227	227	241	241


4. ELECTRICAL PART SPECIFICATIONS & STANDARD

ITEM		STANDARD			
Model		RB1844SW	RB1844SL	RB2044SW	RB2044SL
Rated Voltage		115V			
Frequency		60HZ			
Compressor	Model	MK172C-L2U			
	Starting type	RSCR			
	Refrigerant	R134a			
	Oil Charge	Freol α-10c(Ester), 265cc			
Evaporator	Freezer	Split Fin & Tube Type			
	Refrigerator	Split Fin & Tube Type			
Condenser		Forced & Natural Convection Type			
Dryer		Molecular Sieve XH-9			
Capillary tube		ID0.82 x L3000			
Earth screw		BSBN(Brass screw)			
Door switch		AC125V 1.4A(SSD-6D)			

ELECTRICAL PART SPECIFICATIONS & STANDARD

ITEM				STANDARD		
Temperature	Freezer	Type	Temperature Selection	ON(°F)	OFF(°F)	
		F-Sensor	-14°F	-12.0°F	-16.0°F	
			-2°F	0°F	-4°F	
			8°F	10°F	6°F	
	Refrigerator	Type	Temperature Selection	ON(°F)	OFF(°F)	
		R-Sensor	34°F	36°F	32°F	
			40°F	42°F	38°F	
46°F			48°F	44°F		
Electrical parts	Defrosting	First Defrost Cycle (Concurrent Defrost of F and R)		4hr ±10min		
		Defrost Cycle(FRE)		Min. 12hrs, Max. 22Hrs		
		Defrost Cycle(REF)		Min. 6hrs, Max. 11Hrs		
		Pause Time		10 ±2min		
	Sensor	Freezer-Sensor		THERMISTOR (502AT), SPEC:5.0KΩ AT 77°F		
		Refrigerator-Sensor				
		FRE Evap-Sensor				
		REF Evap-Sensor				
		Ambient TEMP-Sensor				
	Heater	Defrost Heater(FRE)		242W		
		Drain Heater(FRE)		52W		
		Defrost Heater(REF)		120W		
		Drain Heater(REF)		38W		
	Fuse	Thermal-Fuse for preventing overheating of Freezer Defrost-Heater		AC250V 10A 77±5°C		
		Thermal-Fuse for preventing overheating of Freezer Defrost-Heater				
	Capacitor	RUNNING	RSCR 250VAC, 12μF			
	Over-Load Protector	MODEL	4TM437RHBYY-53			
TEMP. ON		130 ± 5				
STARTING- RELAY	TEMP. OFF	69 ± 9				
	MODEL	J531Q33E100M200-2				
	OPERATION	10 ± 20%				
MOTOR- FAN	FRE.	IS3210-SNP6D				
	REF.	IS3208-SNP6H				
	CIRCUIT	IS3208-SCH6A				
LAMP	FRE(INCANDESCENT)	110V-130V/15W				
	REF(INCANDESCENT)	110V-130/30W				


Ref. 5) Check Door S/W

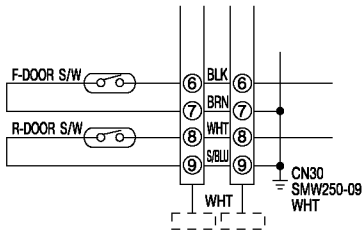


- (Refrigerator Bulb)
1. Open the door and check if the freezer lamp turns on.
 2. Press the Door S/W and check if the freezer lamp turns off.
 3. Close the freezer door and repeat 1 and 2 for refrigerator door.
 4. If there is a problem, check lightbulb and door S/W.
 5. Check wire connection.

- (Micom signal)
1. Check if CN30 ⑥ and ⑧ is 5V DC after closing the F-R doors.
 2. Check if CN30 ⑥ is 0V DC when opening F door.
Check if CN30 ⑧ is 0V DC when opening R door.
 3. If there is problem, check door S/W and wire connection.

Ref. 6) Forced Operation and Forced Defrosting

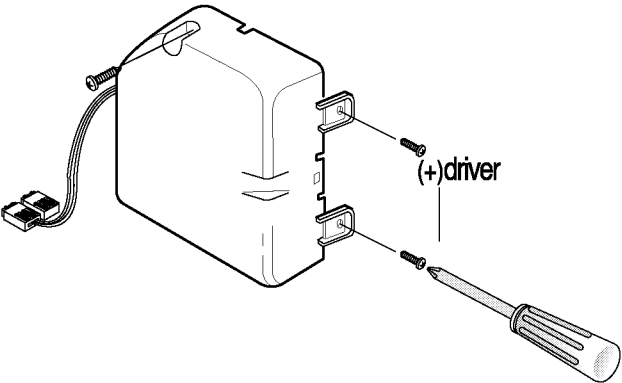


- (Forced running)
- * This function is used to turn on the comp and fan immediately regardless of the temperature of freezer using the test button on the main PCB.
1. Press the TEST button on the PCB after removing the main PCB cover in the machine compartment.
 2. Buzzer will sound to indicate the forced running.

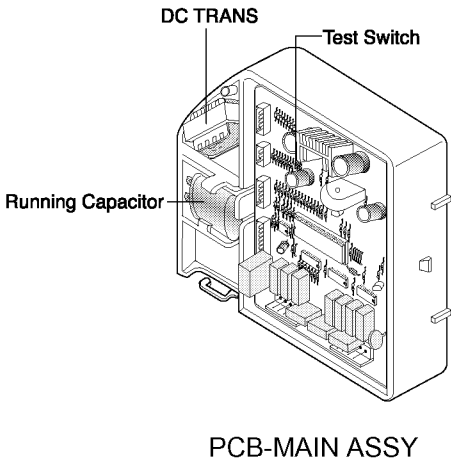

- (Forced defrosting)
- * This function is used to turn on the defrosting regardless of defrost time.

1. Press the button during forced running.
Then, R-defrosting is performed.
2. If the button is press during R-defrosting, F-defrosting is also performed at the same time.
3. If the button is pressed during R-F defrosting, test mode is released.

Ref. 3) Check a load

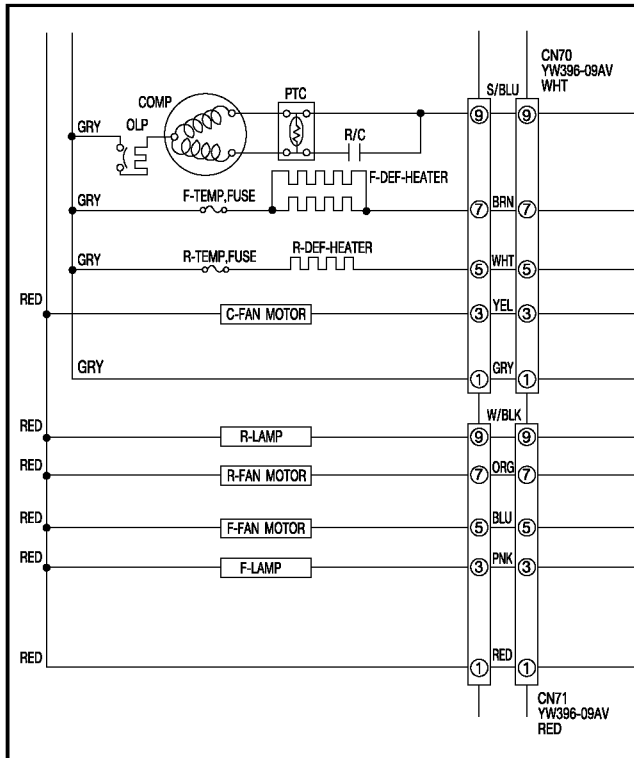


* Unplug the power cord and disconnect the connector from the main PCB CN70, 71 and measure the following:

1. Measure resistance between the terminals and check for malfunctioning of a load and wire connection.

Subordinate	Measurement terminal	Evaluation of measurement result
R Defrost heater	CN70 ⑤ - ①	
F Defrost heater	CN70 ⑦ - ①	
Comp	CN70 ⑨ - ①	
Comp-circulation fan	CN71 ⑦ - ①	
R-Circulation fan	CN71 ⑤ - ①	
F-Circulation fan	CN70 ③ - ①	
R-Lamp	CN71 ⑨ - ①	
F-Lamp	CN71 ③ - ①	

Ref. 4) Check sensors

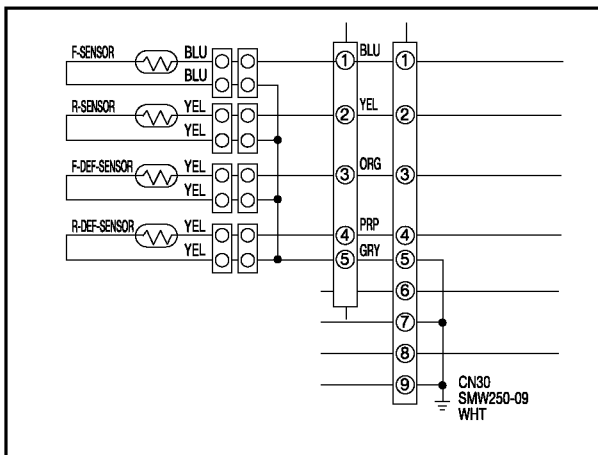

* Disconnect the connector from the main PCB CN30.

* Resistance will be lowered while the temperature rises due to a NTC type sensor.

1. R sensor measures resistance of CN30 between ② ~ ⑤.
2. Freezer sensor measures resistance of CN30 between ① ~ ⑤.

3. R-defrost sensor measures resistance of CN30 between ④ ~ ⑤.
4. F-defrost sensor measures resistance CN30 between ③ ~ ⑤.
5. The measured value above is compared to the sensor specification and the temperature table in specification found in the manual.

5. WARRANTY INFORMATION

SAMSUNG REFRIGERATOR (18 Cubic Feet and Larger Capacity)

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor on Refrigerator
Five (5) Years Parts and Labor on Sealed Refrigeration System Only*
(*Compressor, evaporator, condenser, drier, connecting tubing)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace any part found to be defective, at our option and at no charge as stipulated herein, with new or reconditioned parts during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States. In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible from floor level to service personnel. If during in-home service repair cannot be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external plumbing and leaks, external wiring, circuit breakers, fuses or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; loss of food due to spoilage; consumable items including filters and light bulbs.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.


Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG CUSTOMER CARE CENTER
400 Valley Road, Suite 201, Mt. Arlington, NJ 07856, Tel: 973-601-6000, Fax: 973-601-6001
1-800-SAMSUNG (1-800-726-7864) and www.SAMSUNGUSA.com


6. Interior Views and Dimensions

6-1) Shelves and Bins

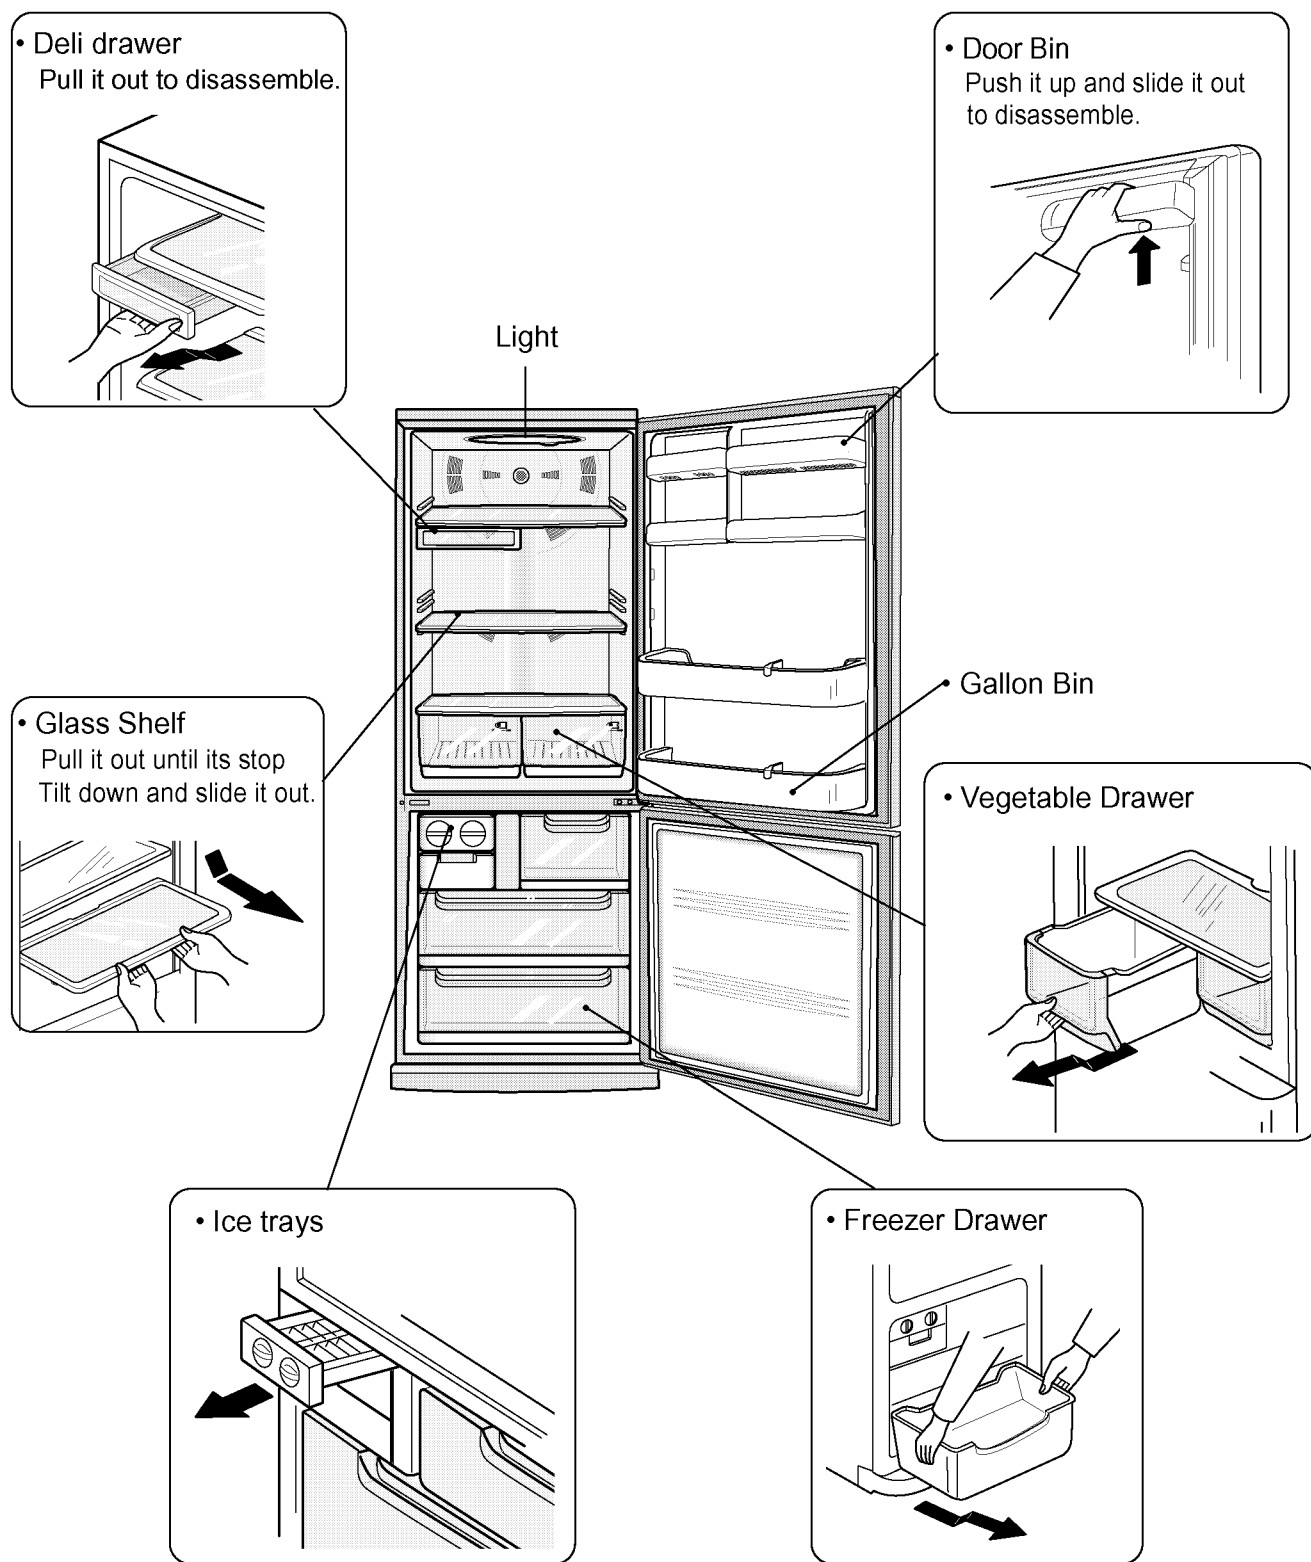


Appendix I (Reference for circuit diagnostics)

Ref.1) Wire connector on the cabinet door.

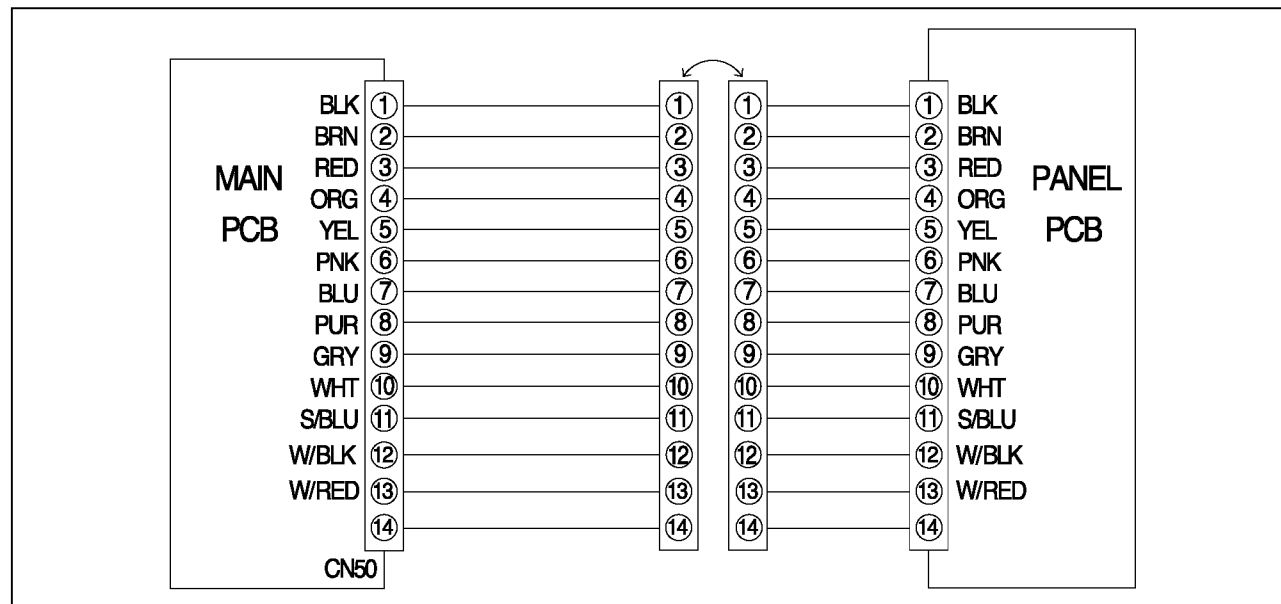

Ref. 2) How to check relay failure

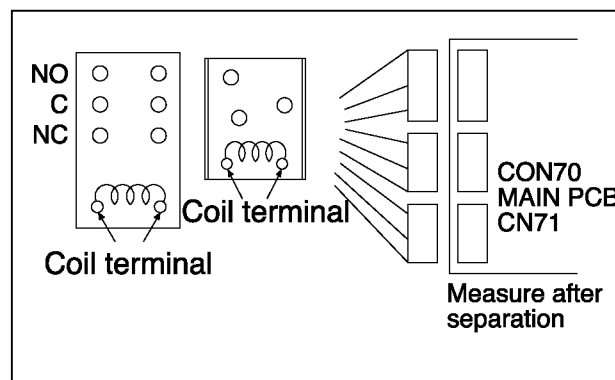

* Disconnect the wire connector from the main PCB CN70, 71 and measure the following items.

1. Measure the coil bisection of the relay and check whether it works.
2. Measure the apex bisection for open circuit.

Category	Voltage of coil terminal	Judge
3-contact terminal Relay	DC 12V(Operation)	C-NO:SHORT
		C-NC:OPEN
	DC 0V(Standstill)	C-NO:OPEN
2-contact terminal Relay	DC 12V(Operation)	SHORT
	DC 0V(Standstill)	OPEN

Note) C → Common, NO → Normal open, NC → Normal close


3. When it operates as above, it is normal and when it does not operate, repair the corresponding relay.

13. Safety Instructions on Service

- Unplug the refrigerator before making any repair or any replacement.
 - ⇒ Avoid the electric shock.
- Use the rated components on the replacement.
 - ⇒ Check the correct model number, rated voltage, rated current, operating temperature and so on.
- On repair, be sure that the wires such as harness are bundled tightly and are not exposed by water.
 - ⇒ Bundle wires tightly in order not to be detached by the external force.
- On repair, remove completely dust, particles or other things on housing parts, harness parts, and connectors.
 - ⇒ Cleaning may prevent fire by tracking or short.
- Check if there is any trace indicating the infiltration of water on electrical parts.
 - ⇒ If there is a trace, change the related components or do the necessary action such as taping using the insulating tape.
- After repair, check the assembled state of parts.
 - ⇒ It must be the same assembled state as before.
- Check the surrounding conditions of the installed refrigerator.
 - ⇒ When the refrigerator is located at humid or wet place, or the installed state is unstable, change the location.
- If needed, do the ground.
 - ⇒ Especially, if there is a possibility of the electric leakage, this appliance must be properly grounded.
- Do not allow consumers to use one outlet for several plugs.
- Check if the power cord is placed under other appliance and so was damaged, worm-out and squeezed.
 - ⇒ Repair defective power plug or outlet immediately.
 - ⇒ Make sure that the power cord is not placed under other appliance or squeezed.
- Do not allow consumers to keep bottles or the likes in the Freezer or to keep foods in unstable position.
- Do not allow consumers to repair the appliance by themselves.
- Do not allow consumers to keep other chemicals except food.
 - ⇒ Medicines and other materials for research ; This appliance will not maintain the precisely constant temperature for them.
 - ⇒ Volatile material(Alcohol, Benzene, Ether, LP gas etc.) : possibility of explosion

Interior Views and Dimensions

6-2) Dimensions of Refrigerator (Inches)

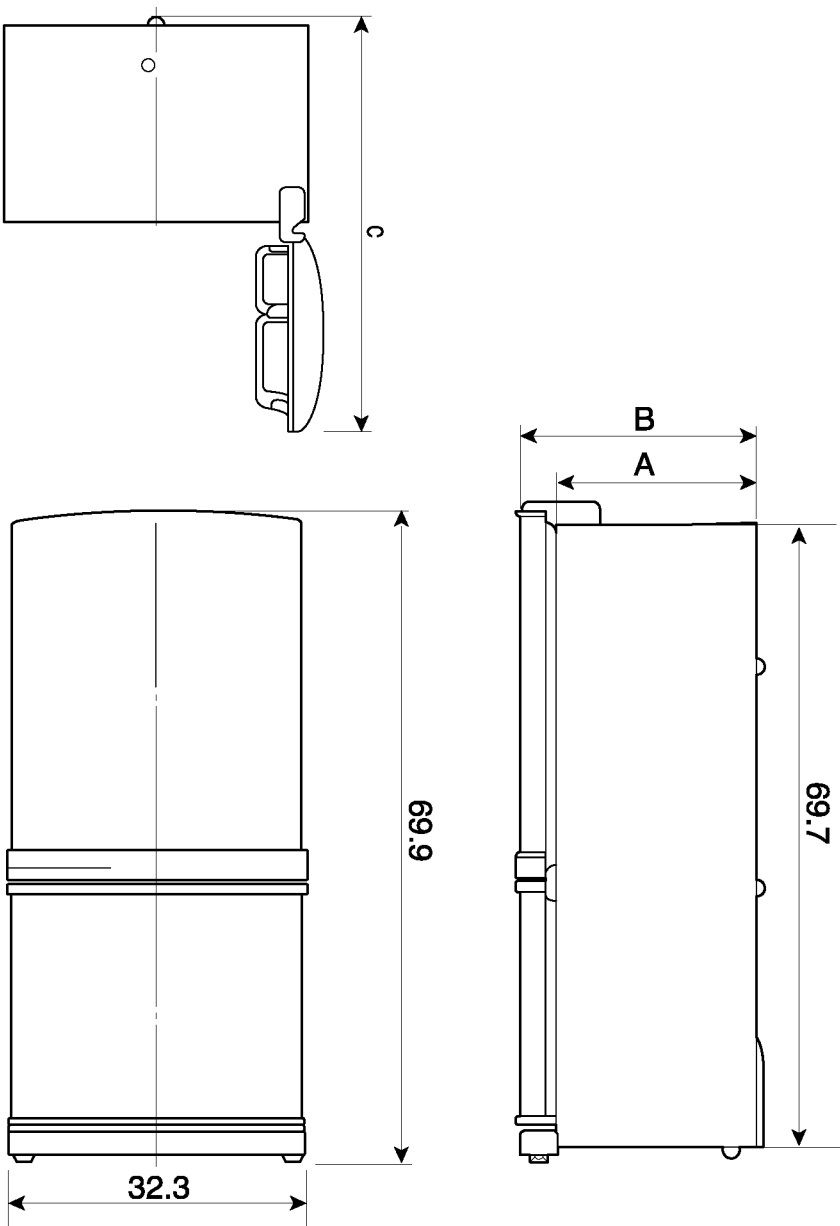


MODEL	A	B	C
RB1844	24.3	28.3	57.8
RB2044	26.3	30.3	59.8

7. Refrigeration Cycle and Cool Air Circulation Route

7-1) Refrigerant Route in Refrigeration cycle

Compressor → Sub condenser → Cluster pipe → Hot pipe → Dryer → Capillary tube
 → R-Evaporator → F-Evaporator → Accumulator → Suction pipe → Compressor

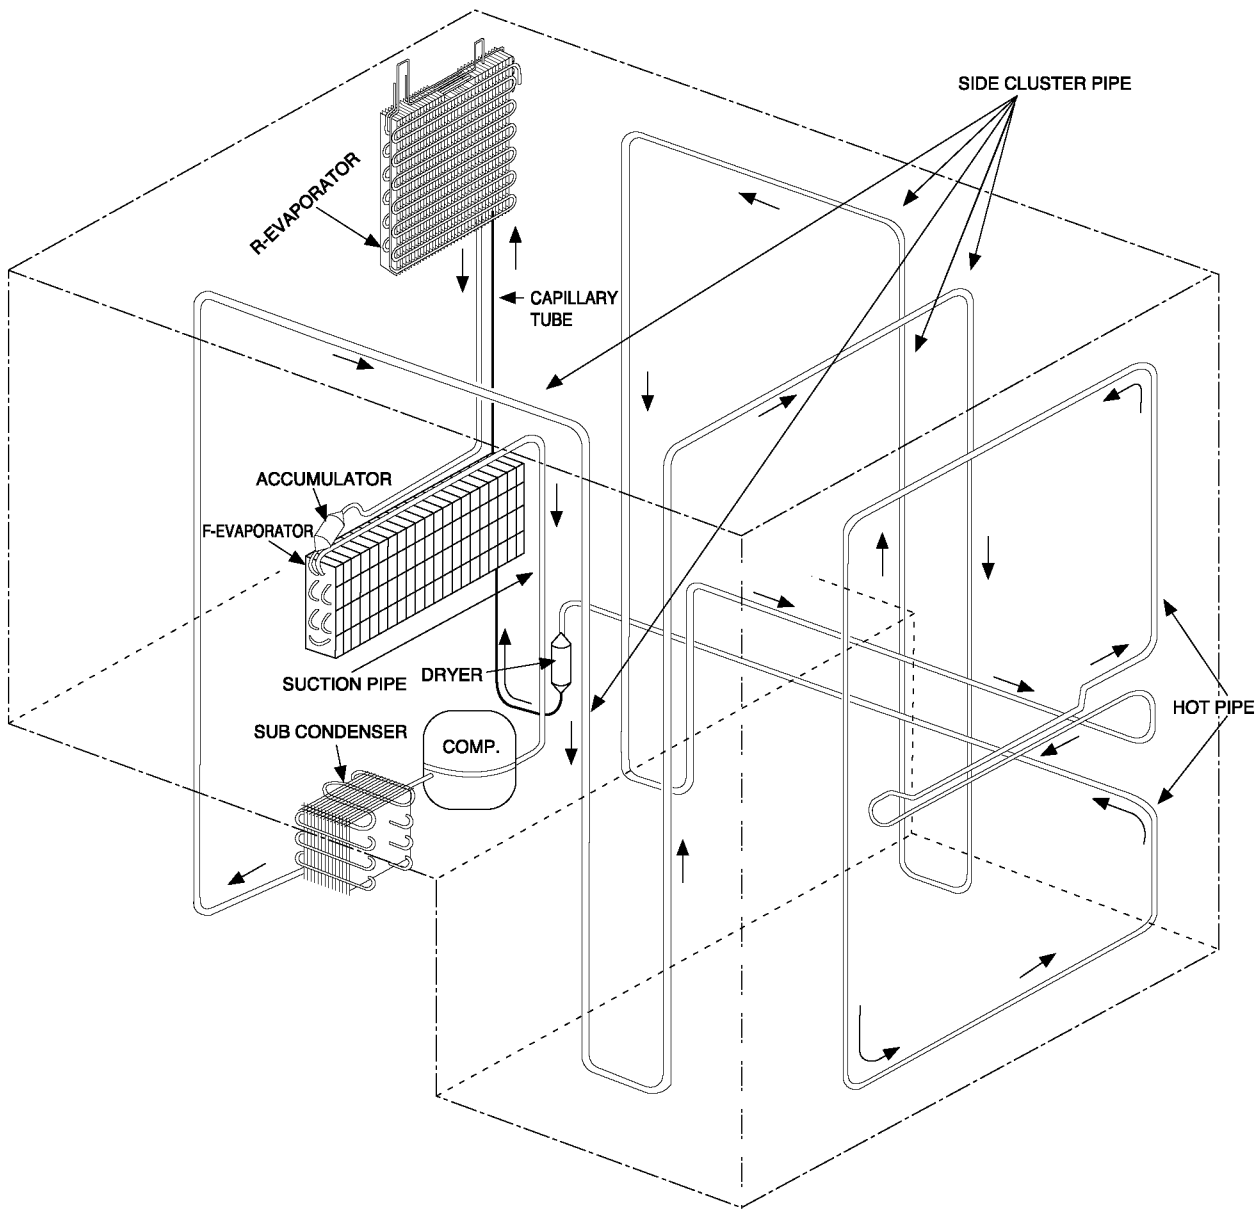


Illustrated Parts Catalog.

■ Parts List of Cabinet

NO	CODE-NO	PART NAME	OPTION		SPEC
			1855SW/2055SW	1855SL/2055SL	
1	DA61-10145D	HINGE-LOW			
2	DA64-20138B	TRIM-PLATE,ABSORBER			
3	DA63-10262F	COVER-LEG			
	DA63-10262P	COVER-LEG			SNOW WHITE
4	DA34-00122D	SWITCH DOOR			NOBLE GRAY
5	DA61-00758A	CASE-PCB PANEL			
6	DA67-30218R	CAP-SCREW			
	DA67-00322K	CAP-SCREW			SNOW WHITE
7	DA26-30111J	TRANS POWER			NOBLE GRAY
8	2501-001045	C-OIL			115V
9	DA63-01271A	COVER-PCB PANEL			250V, 12uF
10	DA41-00128A	PBA-MAIN			
11	DA63-00951A	GROMMET-DRAIN HOSE,A			115V
12	DA63-00951B	GROMMET-DRAIN HOSE,B			REF(Ø10)
13	DA62-20001Q	TUBE-PVC			FRE
14	DA97-00408B	COVER-COMP ASSY			
15	DA31-00010B	FAN-ASSY			
16	DA31-10110G	MOTOR-CIRCUIT			
17	DA97-00921A	PIPE-CONNECT			115V/60Hz
18	DA97-00180N	TRAY-DRAIN WATER ASSY			115V
19	DA63-40171B	GROMMET-SUCT PIPE,A			PIPE-SUB COMA
20	DA63-40171D	GROMMET-SUCT PIPE,B			PIPE-SUCT
21	DA73-10314L	PIPE-SUB COND ASSY			
22	DA60-20008A	BOLT-HEX			R134a
23	MK172C-L2U	COMPRESSOR			
24	DA73-30102B	DRYER-ASSY			4TM437RHBYY-53
25	DA34-10003D	PROTECTOR O/L			J531Q33E100M200-2
26	DA35-10013N	RELAY-PTC			
27	DA63-10352A	COVER-RELAY			
28	DA71-60141D	CHASSIS-COMP ASSY			
29	DA61-40101C	CASTER-REAR			
30	DA60-90124A	RIVET-CASTER			
31	DA61-00178A	LEG-ASSY			
32	DA63-01489A	GROMMET COMP			
33	DA62-00217A	SEAL-SUB COND			


Illustrated Parts Catalog.

12-4) Cabinet

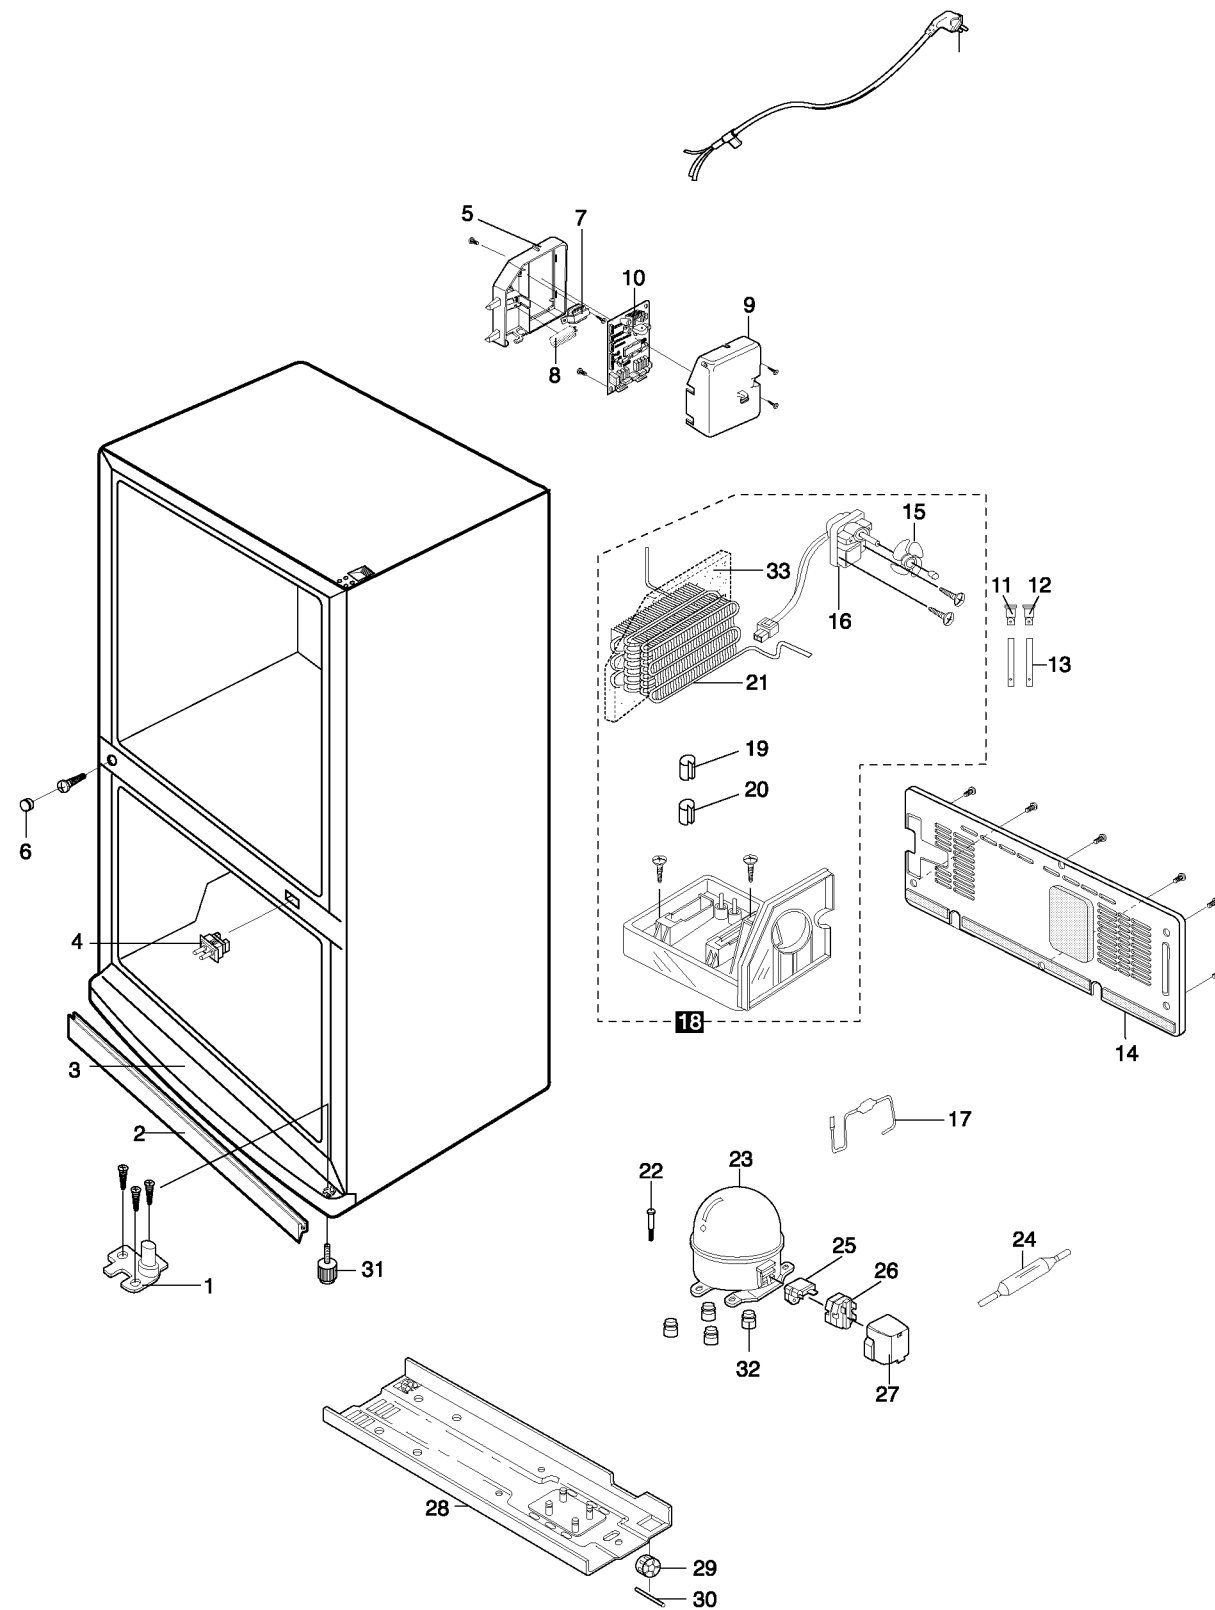

Refrigeration Cycle and Cool Air Circulation Route

7-2) Cool Air Circulation

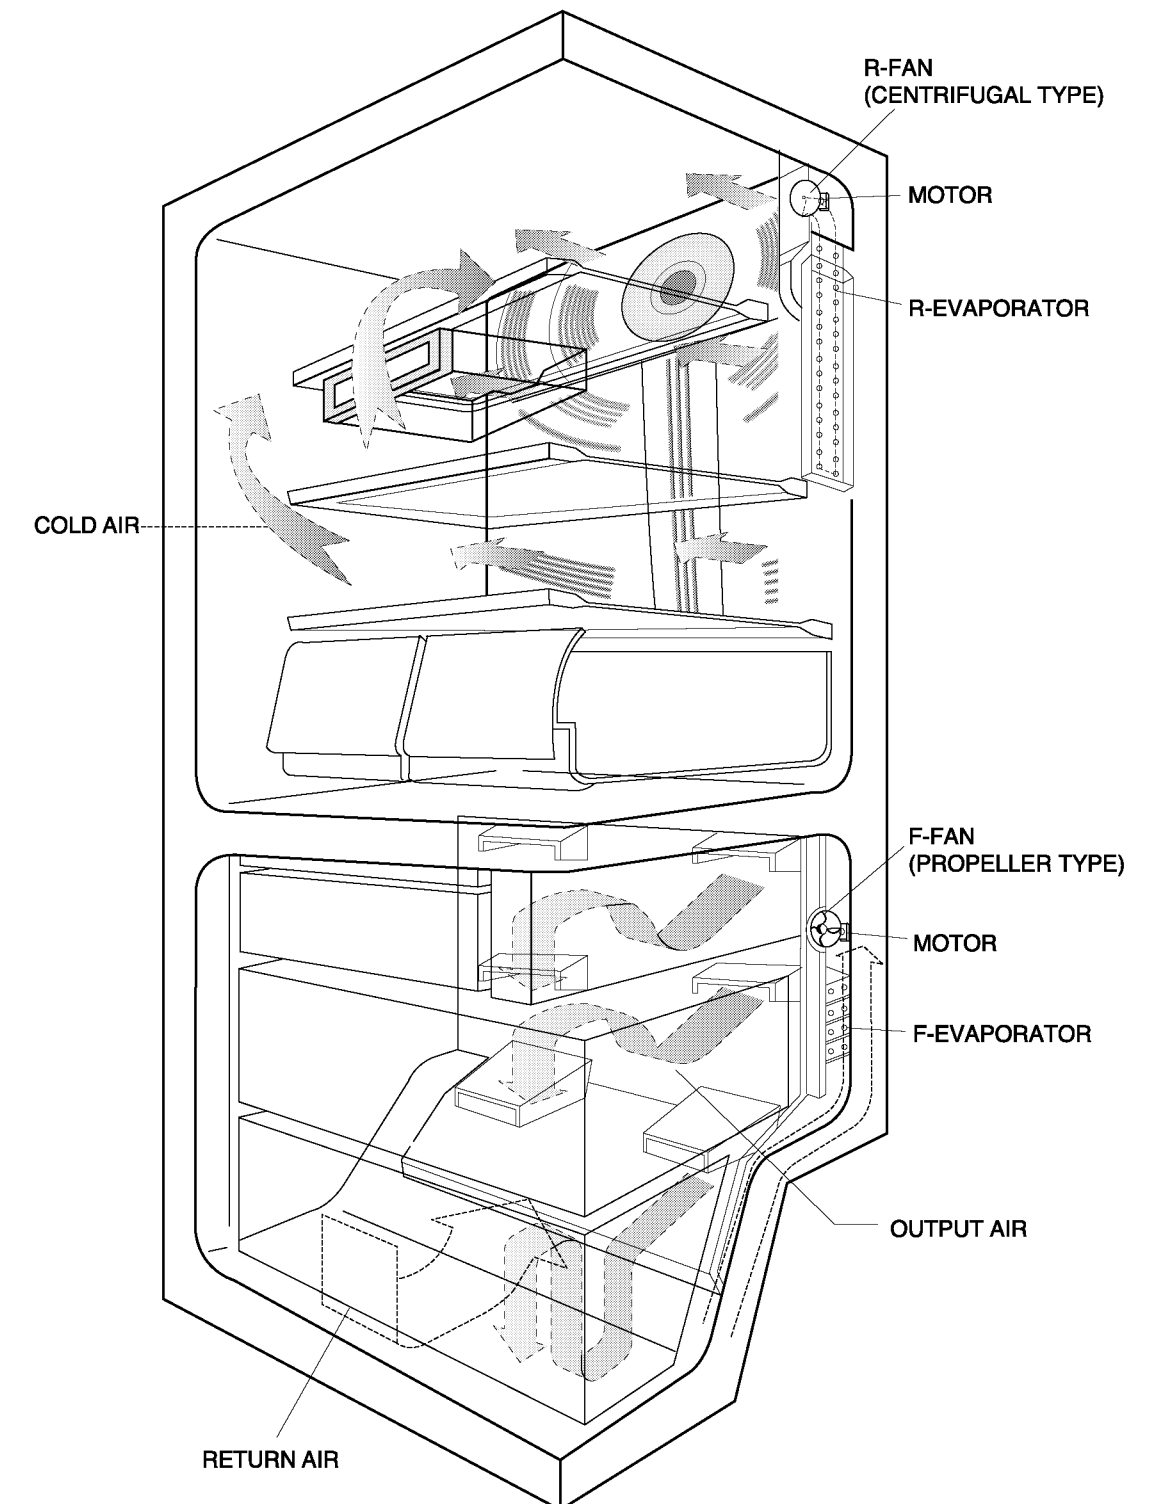

8. Mechanical Disassembly

Refrigerator Disassembly

Control Panel 13

Refrigerator Light 14

Freezer Light 14

Evaporator Cover in the Refrigerator 15

Evaporator Cover in the Freezer 16

Evaporator in the Freezer 17

Evaporator in the Refrigerator 17

Machine Compartment & Electric Box 18


Illustrated Parts Catalog.

■ Parts List of Freezer Door

	CODE-NO	PART NAME	OPTION		SPEC
			1844SW/2044SW	1844SL/2044SL	
1	DA91-01466Q	ASSY FOAM-DOOR REF			SNOW WHITE
	DA91-01466R	ASSY FOAM-DOOR REF			NOBLE-GRAY
2	DA71-40135A	STOPPER DOOR, MID			
3	DA71-40183C	STOPPER DOOR-LOW			SNOW WHITE
	DA71-40183M	STOPPER DOOR-LOW			NOBLE-GRAY
4	DA91-01468A	ASSY FOAM-DOOR FRE			SNOW WHITE
	DA91-01468J	ASSY FOAM-DOOR FRE			NOBLE-GRAY
5	DA63-01052A	GASKET-DOOR SUB FRE			
6	DA63-00926B	GUARD-REF UPP, L			
7	DA63-00927B	GUARD-REF UPP, R			
8	DA63-01262A	GUARD-REF MID			
9	DA63-01263A	GUARD-REF LOW			
10	DA61-00365B	GUIDE-BOTTLE			
11	DA61-00378A	HINGE-UPP, ASSY			
12	DA61-00361A	HINGE-UPP			
13	DA63-50145A	SHIM-HINGE UPP			
14	DA67-00546A	CAP-HINGE UPP			SNOW WHITE
	DA67-00546E	CAP-HINGE UPP			NOBLE-GRAY
15	DA61-10153E	HINGE-MID, ASSY			
16	DA61-10142C	HINGE-MID			
17	DA63-50139C	SHIM-HINGE MID			
18	DA63-00352F	COVER-CONTROL PANEL, ASSY			SNOW WHITE
	DA97-00352G	COVER-CONTROL PANEL, ASSY			NOBLE-GRAY
19	DA63-00909F	COVER-CONTROL PANEL			SNOW WHITE
	DA63-00909G	COVER-CONTROL PANEL			NOBLE-GRAY
20	DA64-00444A	BUTTON-PCB, L			SILVER
21	DA64-00445A	BUTTON-PCB, R			SILVER
22	DA63-00915A	GASKET BUTTON PCB, L			
23	DA63-00916A	GASKET BUTTON PCB, R			
24	DA41-00127A	PANEL-PCB			

Illustrated Parts Catalog.


12-3) Disassembly of Door

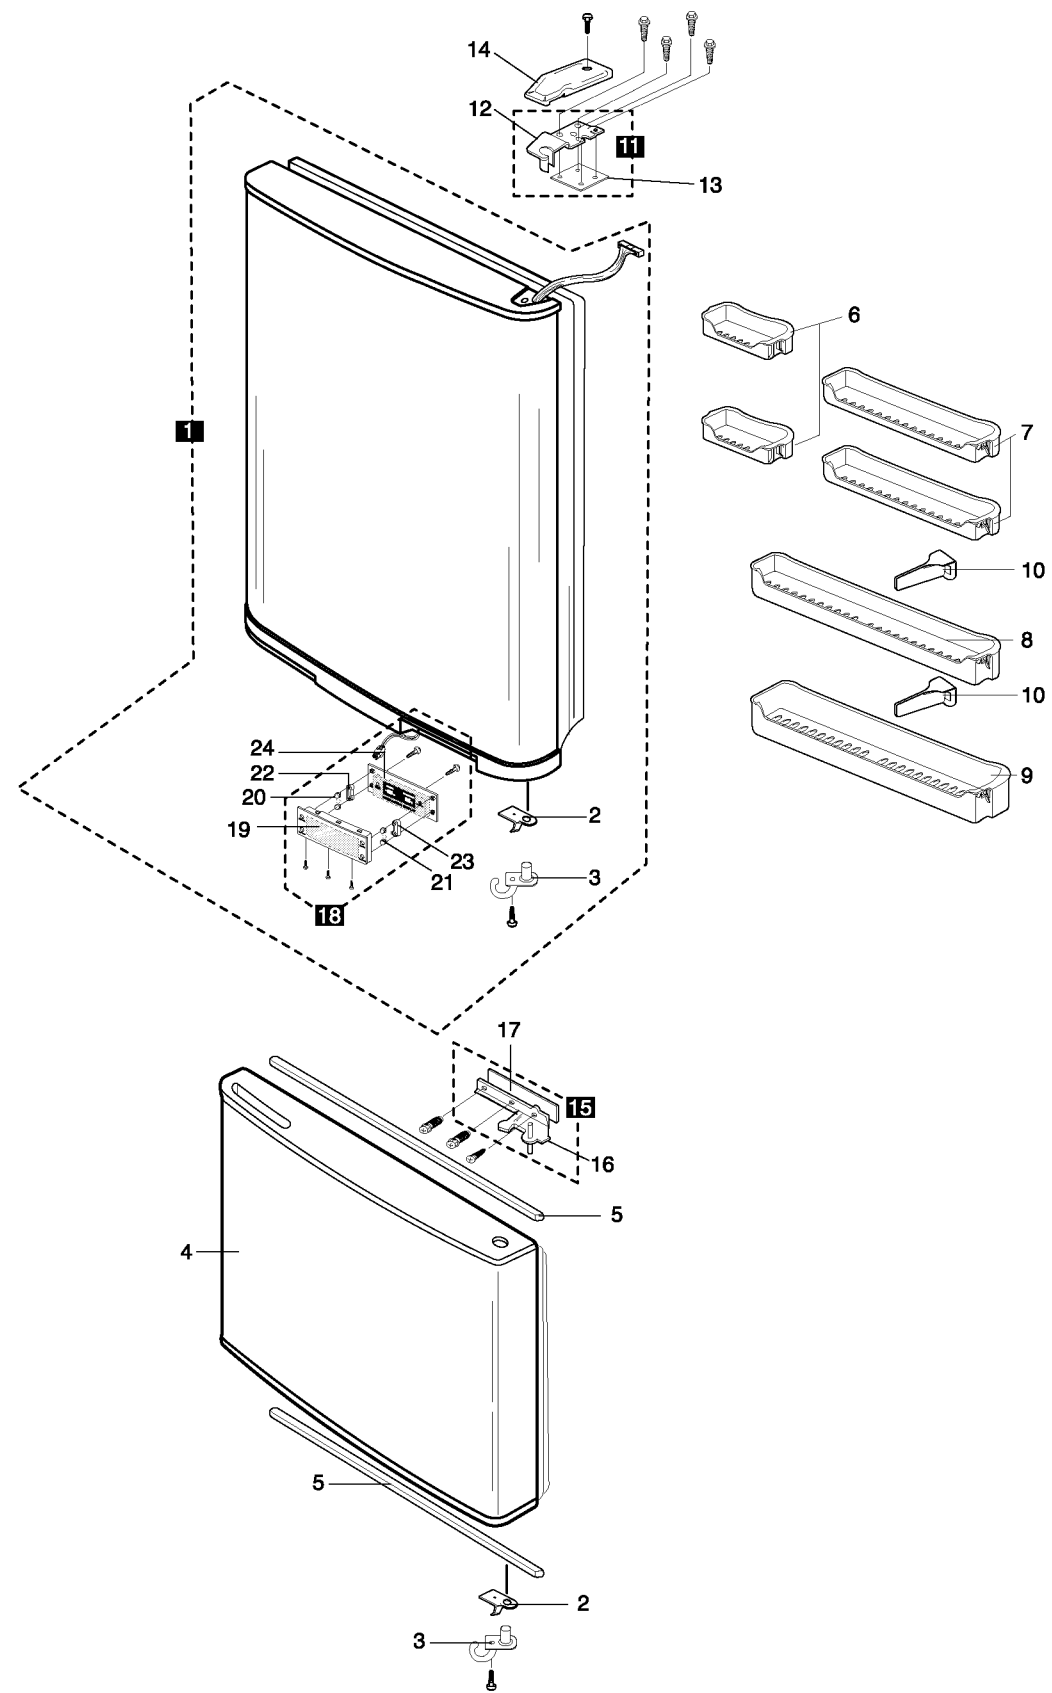

Mechanical Disassembly

Control Panel

- 1. Remove the screws.
- 2. Pull out the control panel.
- 3. Disconnect the wire connector.

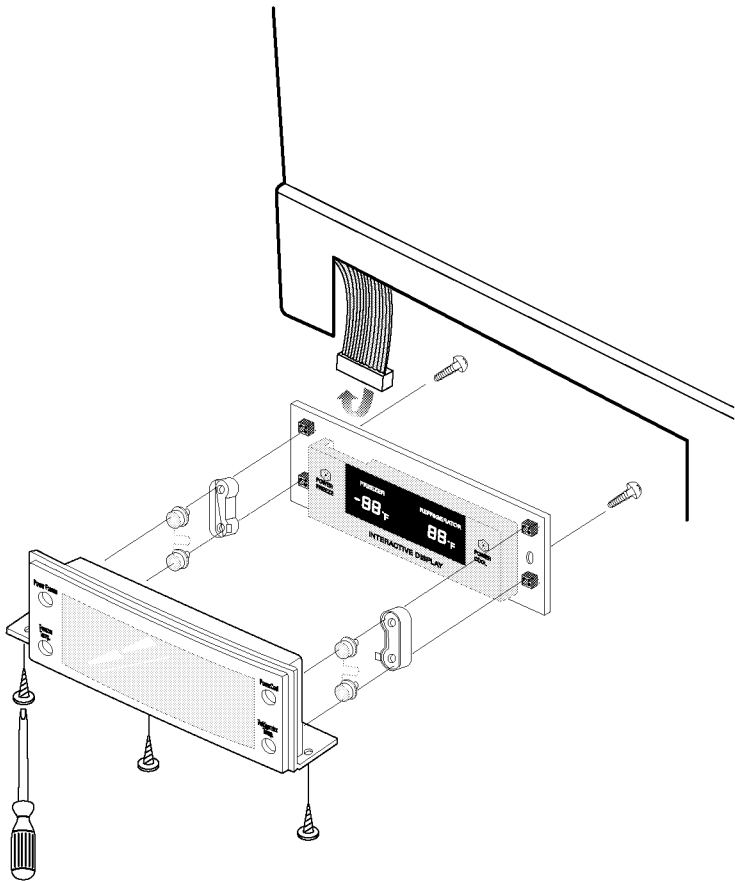

Mechanical Disassembly




Warning

Always unplug the power cord before replacing the refrigerator lamp.
There is the danger of electric shock.

Refrigerator Light


1. Remove the screw.

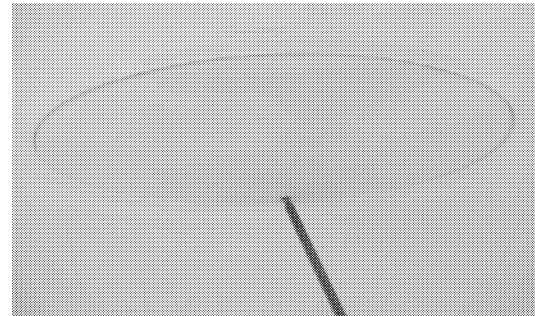

2. Remove the lamp cover by unlocking the tabs and pulling the cover down.




3. Replace the lightbulb by turning it counter-clockwise.

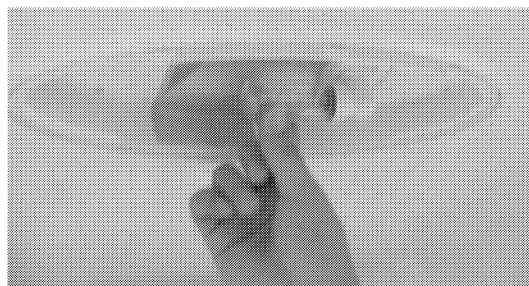


4. After replacing the bulb, reattach the cover and the screw it again.

5. Plug the power cord in and check the lamp by pressing the R-door switch.

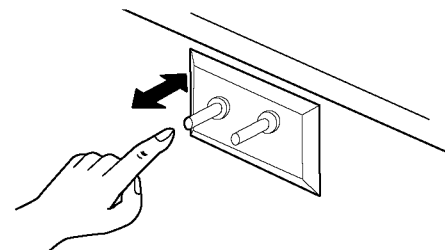


Freezer Light


1. Remove the cover by pressing the bottom tab.

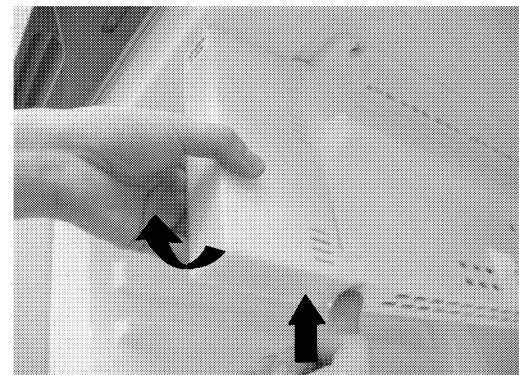

2. Replace the lightbulb by turning it counter-clock wise.

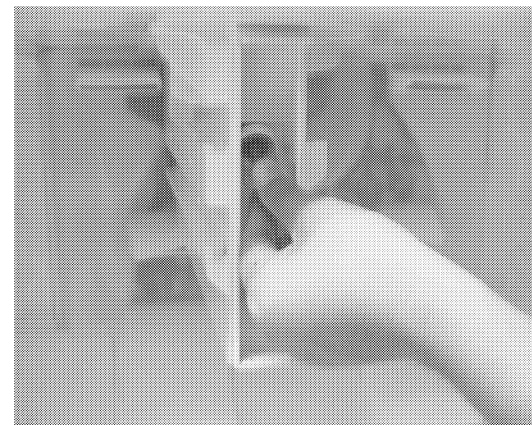

3. Reattach the cover and check the lamp by pressing door switch.

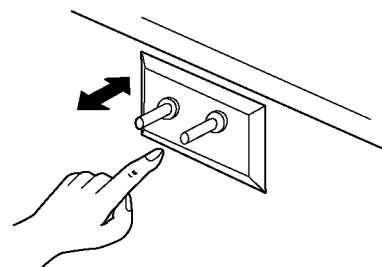


Illustrated Parts Catalog.

Parts List of Refrigerator

NO	CODE-NO	PART NAME	OPTION		SPEC
			RB1844	RB2044	
1	DA97-00681A	CASE-VEG,ASSY			
	DA97-00681B	CASE-VEG,ASSY			
2	DA63-01270A	COVER-VEG			
3	DA64-00656A	KNOB-HUMIDITY			
4	DA66-10104A	ROLLER FRE			
5	DA71-20145A	FIXER ROLLER			
6	DA61-00761A	RAIL-VEG, MID			
	DA61-00760A	RAIL-VEG, MID			
7	DA97-00663A	COVER-VEG ASSY			
	DA97-00663B	COVER-VEG ASSY			
8	DA64-00449A	TRIM-COVER,VEG			
	DA64-00448A	TRIM-COVER,VEG			
9	DA67-00505L	SHELF GLASS			COVER VEG
	DA67-00505M	SHELF GLASS			COVER VEG
10	DA97-00664A	SHELF REF-MID,ASSY			
	DA97-00664B	SHELF REF-MID,ASSY			
11	DA97-00664C	SHELF REF-UPP,ASSY			
	DA97-00664D	SHELF REF-UPP,ASSY			
12	DA64-00450A	TRIM-SHELF REF			SHELF(MID/UPP)
	DA64-00451A	TRIM-SHELF REF			SHELF(MID/UPP)
13	DA67-00505J	SHELF GLASS			SHELF(MID/UPP)
	DA67-00505K	SHELF GLASS			SHELF(MID/UPP)
14	DA61-00368A	RAIL-CHILLED,L			SHELF-UPP
	DA61-00367A	RAIL-CHILLED,L			SHELF-UPP
15	DA61-00370A	RAIL-CHILLED,R			SHELF-UPP
	DA61-00369A	RAIL-CHILLED,R			SHELF-UPP
16	DA63-00945A	TRAY CHIL ROOM-ASSY			
	DA97-00296D	TRAY CHIL ROOM-ASSY			
17	DA63-00925B	COVER-LAMP REF			
18	DA67-40169A	TRAY-EGG			
19	4713-001172	LAMP-INCANDESCENT			130V, 30W
20	DA96-00017C	EVAP-REF ASSY			115V, 120W
21	DA32-00006C	SENSOR ASSY			EVAP-REF
22	DA47-00095D	ASSY-FUSE THERMO(R)(77°C)			EVAP-REF, 250V
23	DA97-00459H	COVER-EVAP REF ASSY			115-127V, 60Hz
24	DA63-00933A	COVER-EVAP FR REF			
25	DA63-00932A	COVER-EVAP RE REF			
26	DA63-00183B	COVER-MOTOR			
27	DA31-00016A	FAN-CIRCUIT			
28	DA63-00934A	COVER-SENSOR REF			
29	DA64-00452B	TRIM-COVER SENSOR			
30	DA60-00033A	SPACER-DUCT			220V~240/50Hz
31	DA31-00003N	MOTOR-FAN			115V
32	DA63-00771A	GROMMET-MOTOR			
33	DA32-10105T	SENSOR ASSY			COVER EVAP
34	DA62-00106A	SEAL-COVER EVAP RE			
35	DA62-00109A	SEAL AIR SIDE			
36	DA97-00441B	PLATE-DRAIN REF ASSY			115V/30W

Illustrated Parts Catalog.


12-2) Refrigerator

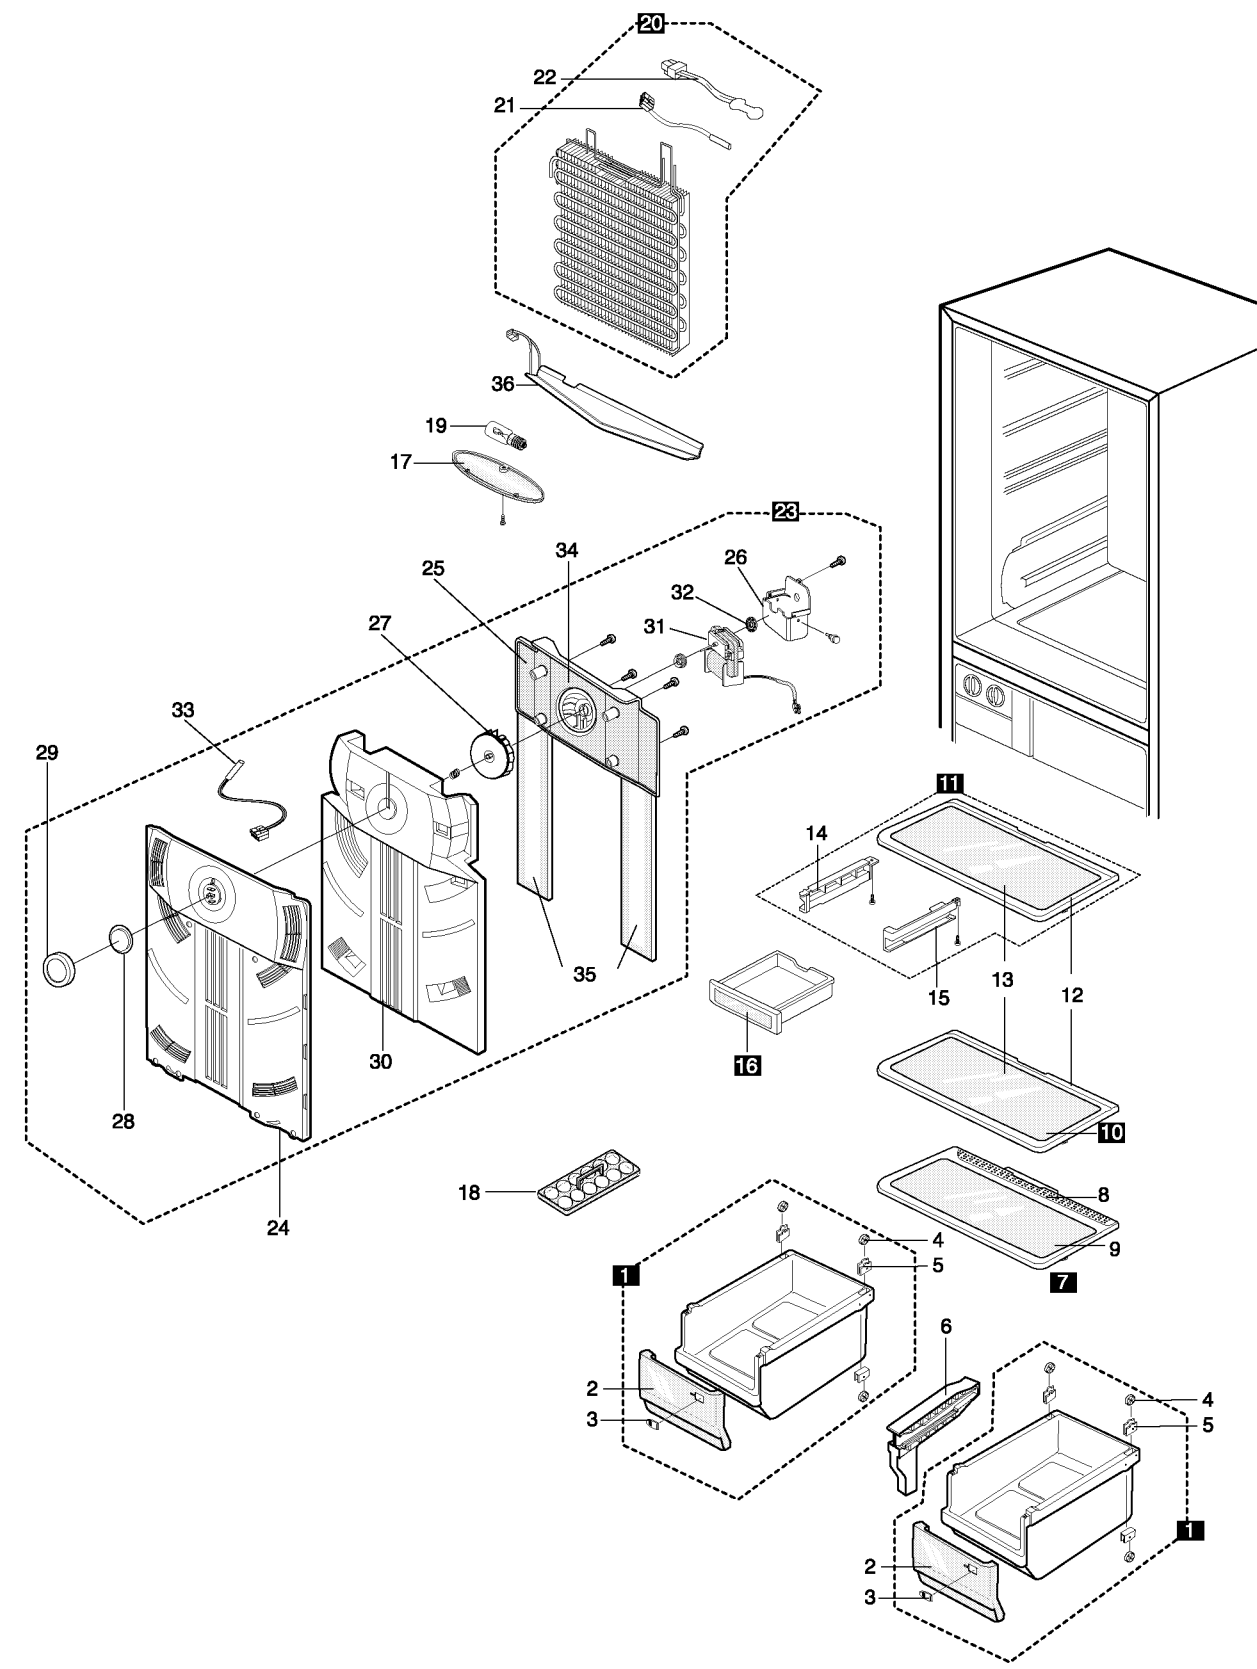

Mechanical Disassembly


Evaporator Cover in the Refrigerator

1. Remove all shelves and drawers from the refrigerator.

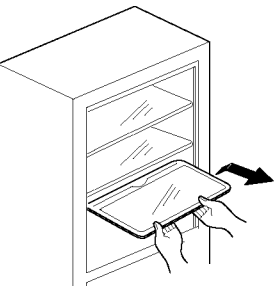


2. Pull out the screw caps with a small flat-blade screwdriver.

3. Remove 6 Phillips screws from the cover.

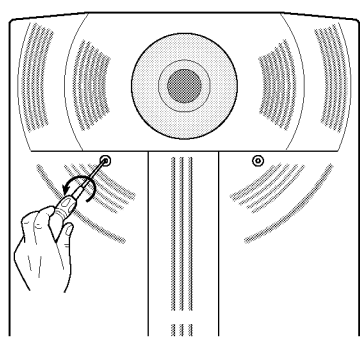


4. Unlock the 2 tabs with a flat-blade screwdriver on each side of the bottom cover.


5. Remove the evaporator cover by pulling out from the bottom of the evaporator cover.

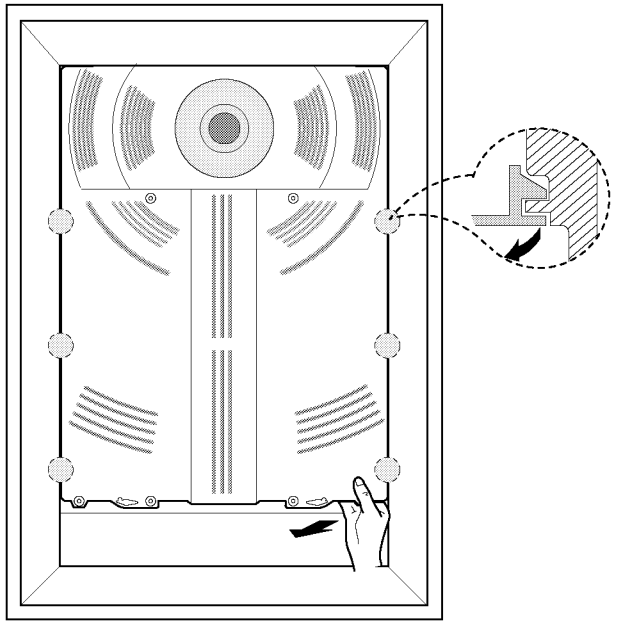

6. Disconnect the wire connector.

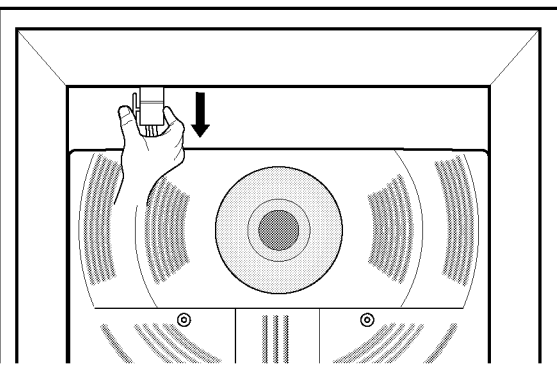


■ Ductwork of the evaporator fan assembly.

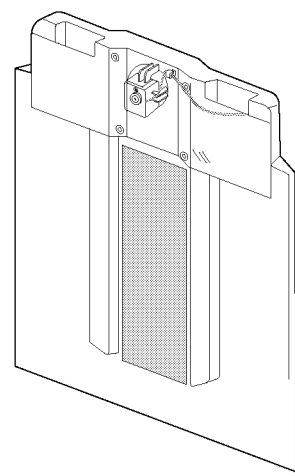


Mechanical Disassembly

Evaporator Cover in Freezer


1. Remove all drawers from the freezer.

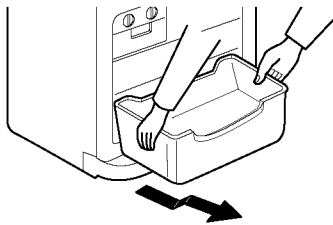


2. Remove screws (2) from the support rail.

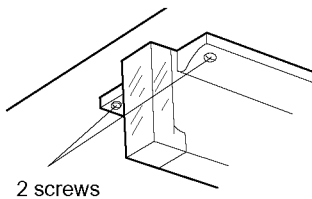


3. Pull down the holder of the support rail and disconnect the wire connector to remove it.

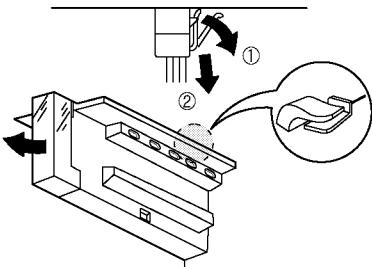


4. Unlock the tabs around the evaporator cover from the bottom.

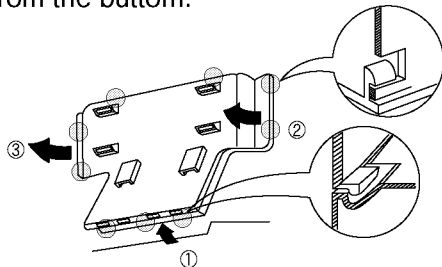

5. Disconnect wire connector from the top-left corner.

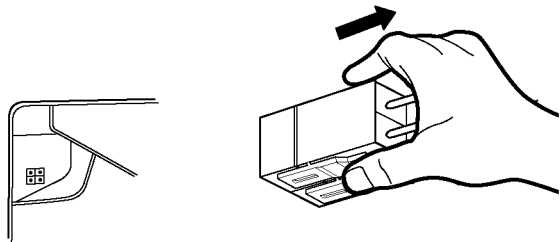

6. Remove 2 screws from the rear cover of the freezer evaporator and unlock the tabs to remove it.

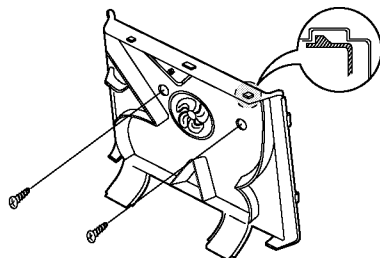


Illustrated Parts Catalog.

■ Parts List of Freezer

NO	CODE-NO	PART NAME	OPTION		SPEC
			RB1844	RB2044	
1	DA67-40203N	TRAY-ICE,ASSY			
2	DA67-40182A	TRAY ICE			
3	DA97-00682C	TRAY-FRE UPP,ASSY			
	DA97-00682D	TRAY-FRE UPP,ASSY			
4	DA63-01651A	COVER-TRAY FREE, UPP			
5	DA97-00683C	TRAY-FRE MID,ASSY			
	DA97-00683D	TRAY-FRE MID,ASSY			
6	DA63-01652A	COVER-TRAY FREE, MID			
7	DA97-00684C	TRAY-FRE LOW,ASSY			
	DA97-00684D	TRAY-FRE LOW,ASSY			
8	DA63-01653A	COVER-TRAY FREE, LOW			
9	DA66-10104A	ROLLER FRE			
10	DA71-20145A	FIXER ROLLER			
11	DA63-00904B	TRAY ICE CUBE			
	DA63-00922B	TRAY ICE CUBE			
12	DA97-00181A	COVER EVAP FR(FRE),ASSY			
13	DA97-00192F	EVAP-FRE ASSY			115V/242W
14	DA47-00095E	ASS'Y-FUSE THERMO(77°C)			EVAP FRE 250V
15	DA32-00006C	SENSOR ASSY			EVAP FRE
16	DA97-00122J	ASSY SUPT-FREE			110~130V
	DA97-00122K	ASSY SUPT-FREE			110~130V
17	DA61-70114B	SUPPORT-FREE,L			
18	DA61-70115C	SUPPORT-FREE,R			
19	DA63-40006A	GROMMET RAIL			ASSY SUPT-FREE
20	DA63-00924A	COVER-LAMP,FRE			
	DA63-00923A	COVER-LAMP,FRE			
21	DA47-00112E	LAMP HOLDER			
22	DA32-10105S	SENSOR ASSY			ASSY SUPT FREE
23	4713-001173	LAMP-INCANDESCENT			110~130V/15W
24	DA97-00390D	COVER-EVAP RE(FRE),ASSY			115V
25	DA63-00903A	COVER-EVAP REAR			
26	DA61-00081B	CASE-MOTOR			
27	DA31-00019A	FAN-PROPELLER			
28	DA31-00002V	MOTOR-FAN			115V,60HZ
29	DA63-00771A	GROMMET-FAN MOTOR			
30	DA97-00195D	DRAIN PLATE FRE ASSY			115V/52W

12 . Illustrated Parts Catalog.

12-1) Freezer

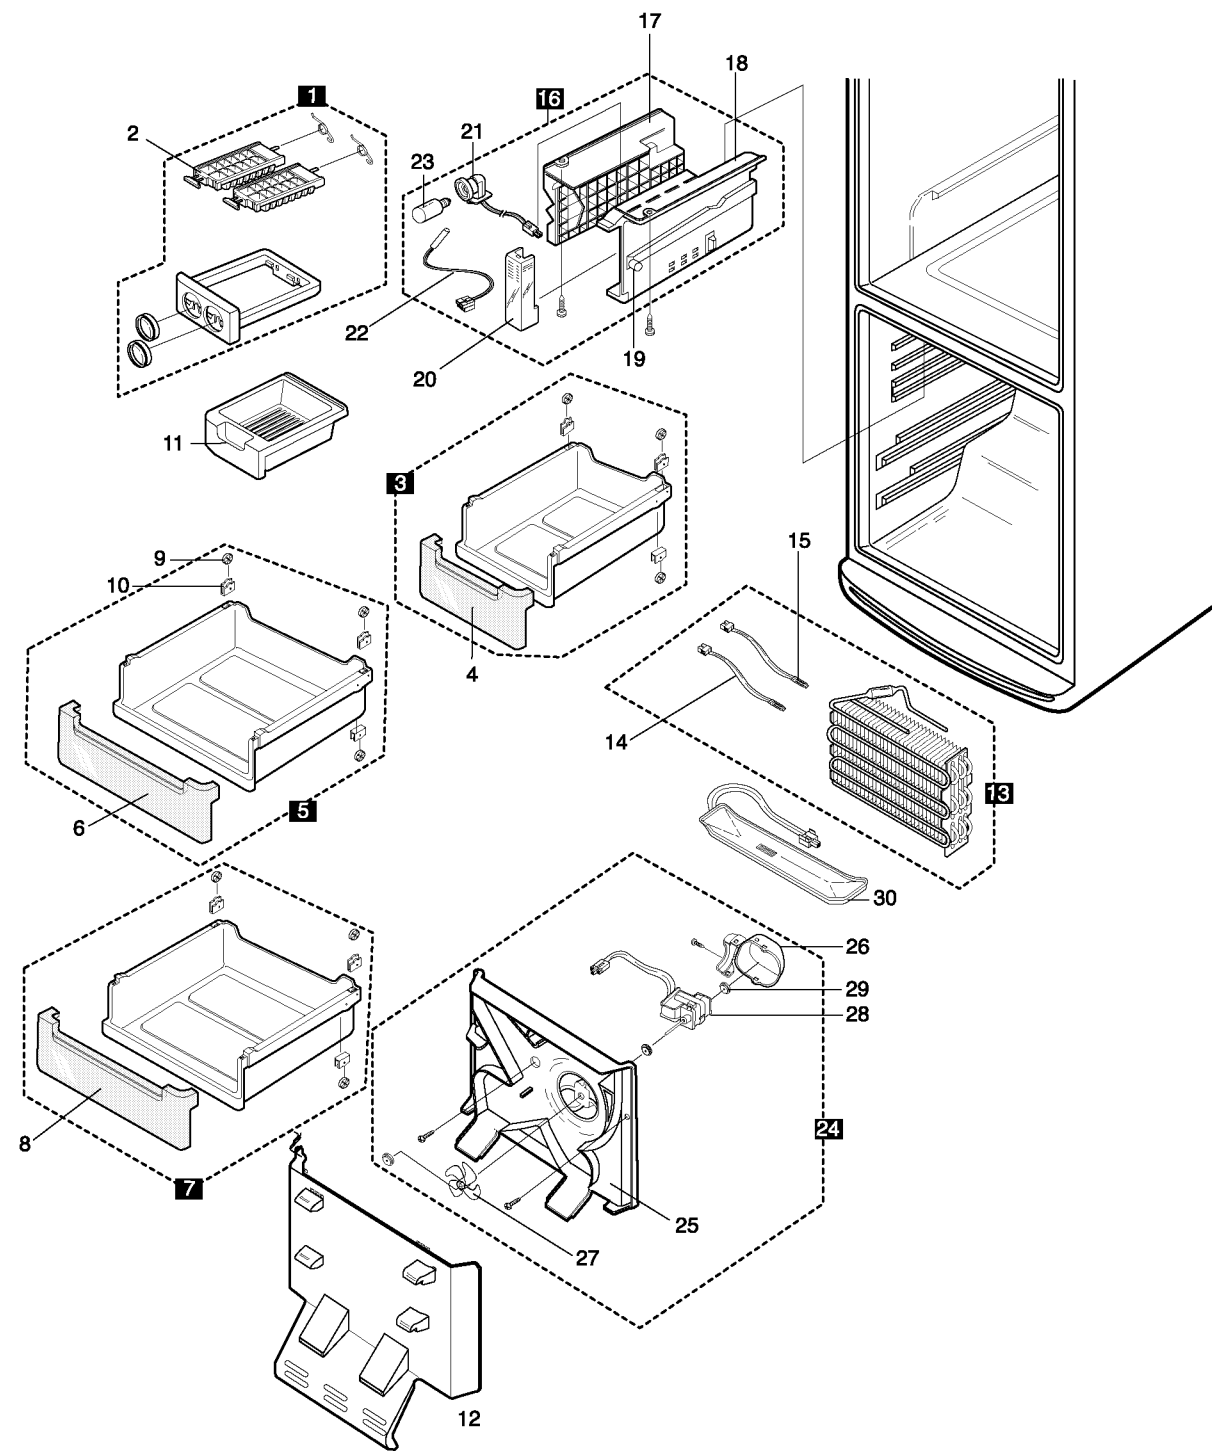


Mechanical Disassembly

Evaporator in Refrigerator

Evaporator is located in the bottom of refrigerator.


1. Take off the ductwork in refrigerator.
2. Disconnect the wire connector.(Heater and Thermistor)
3. Desolder the capillary tube and the suction line from the evaporator.
4. Remove the evaporator.
5. With a file, score the capillary tube just upstream of the soldered point. Break off the soldered section to help prevent solder from plugging the tube during soldering.
6. Place a new evaporator and braze the suction and capillary tube to evaporator using silver solder.
7. Install a replacement dryer.
8. Evacuate and recharge the system using reasonable procedures.

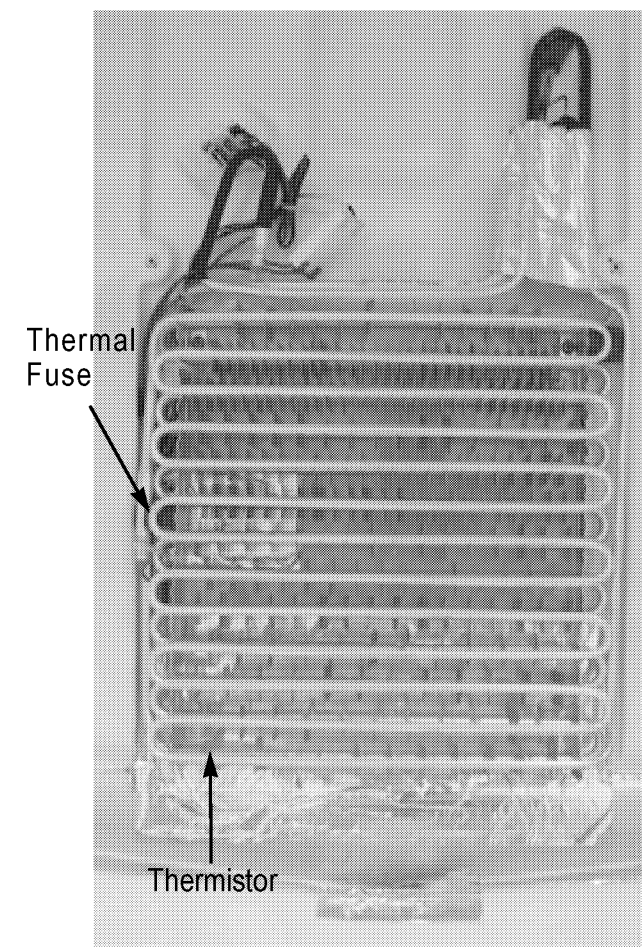

Evaporator in Freezer

Evaporator is located in the bottom of freezer to produce cold air driven across the evaporator coils.

1. Take off the ductwork in Freezer.
2. Disconnect the wire connector (Heater, Bimetal, and Thermistor).
3. Desolder the inlet and outlet tubes.
4. Remove the evaporator.
5. Take the same steps to seal the system as mentioned earlier.

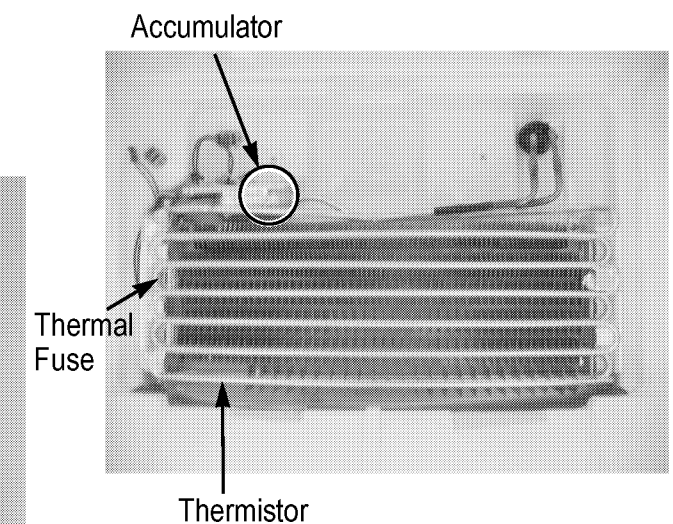


Mechanical Disassembly


Machine Compartment & Electric Box

Warning Make sure the power cord is unplugged before replacing any electric components.


1. Unplug the power cord.

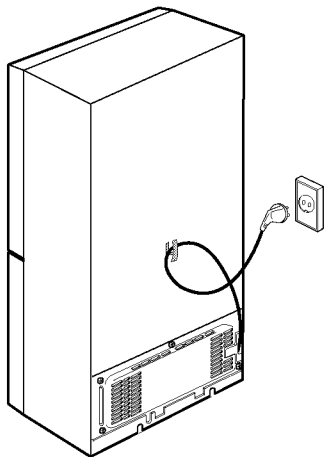


3. Mechine compartment assembly

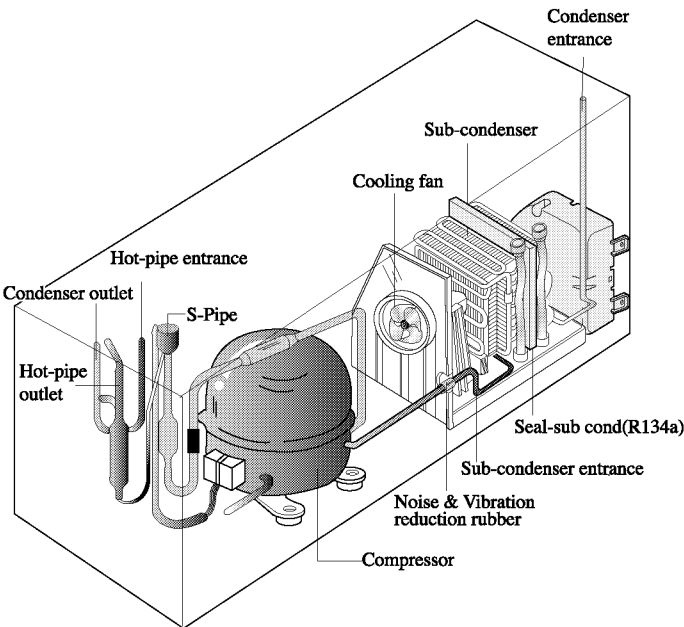


4. Disassemble the electric box cover after removing the screws with a Phillips screwdriver.

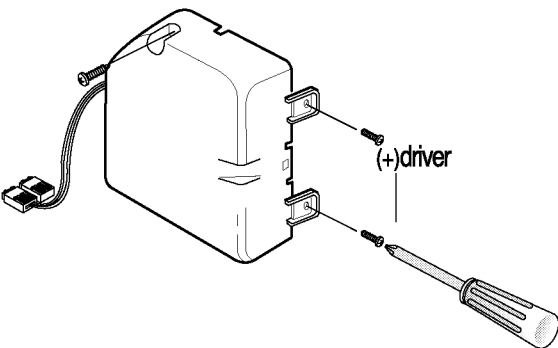

2. Remove the screws of the compartment cover. Slide it up and take out from the refrigerator.

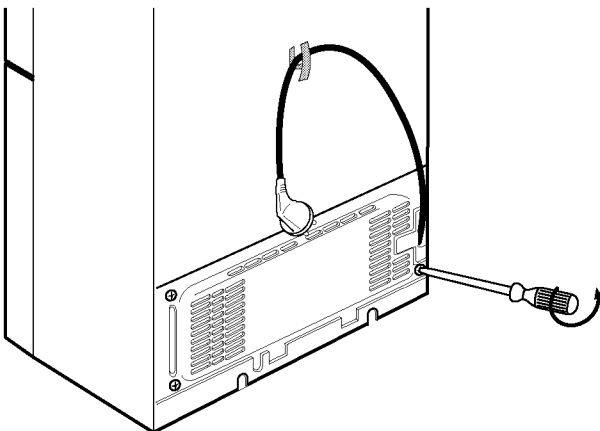

5. Electric box assembly

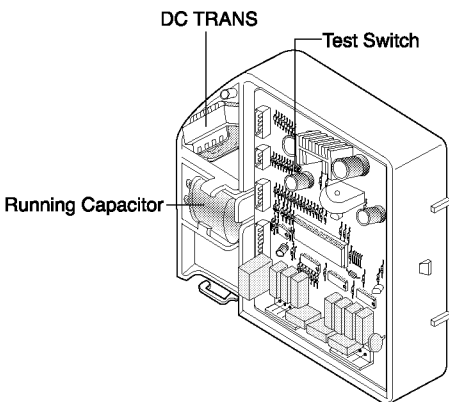


Diagnostics


Pre-check

1. Is the power cord connected to a wall outlet correctly?
2. Be careful of high-voltage, high-frequency discharge from the electronic ballast.

5) If the lamp of refrigerator fails to light

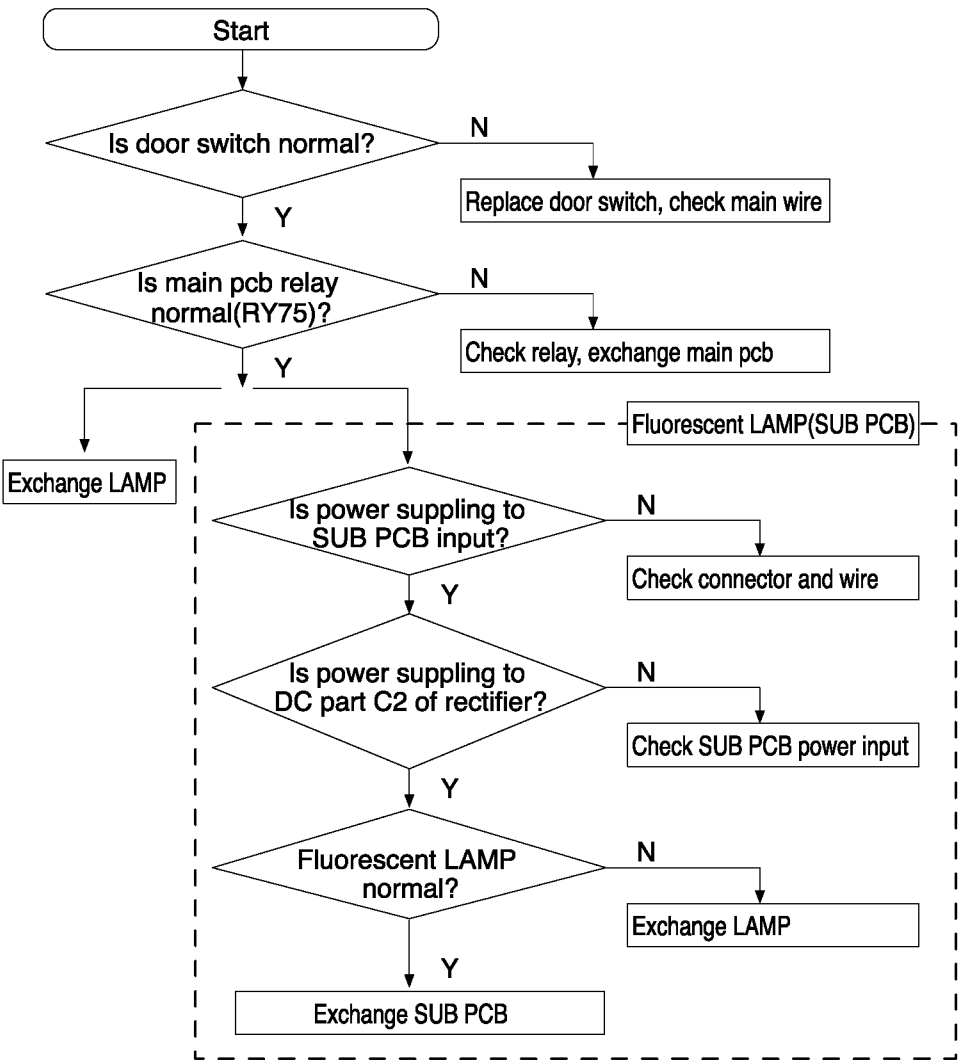


4) When a button of the digital panel is not selected

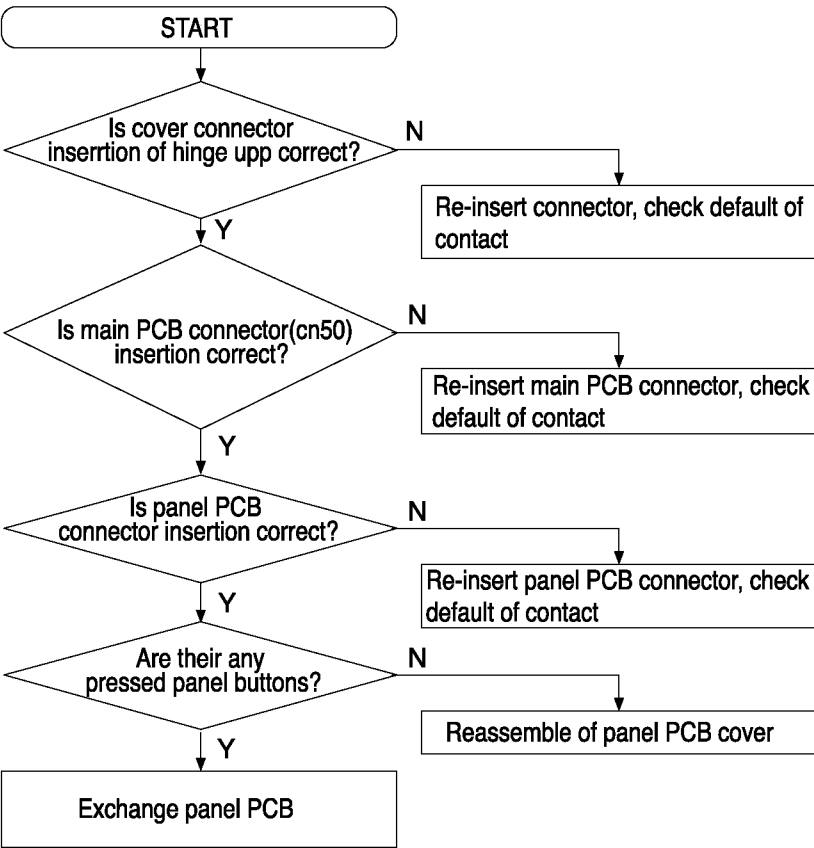

9-1) Digital Panel	20
9-2) Temperature Control Function	20
9-3) Power Freeze and Power cool Functions	20
9-4) Sound Function	21
9-5) Defrost Function	21
9-6) Forced Operation Function	22
9-7) Power failure compensating Function	23
9-8) Exhibition Function	23
9-9) Self - Diagnostics Function	23
9-10) Component Load Operation Function.	24
9-11) C-Fan Motor Delay function	25

Operation Function

9-1) Digital Panel

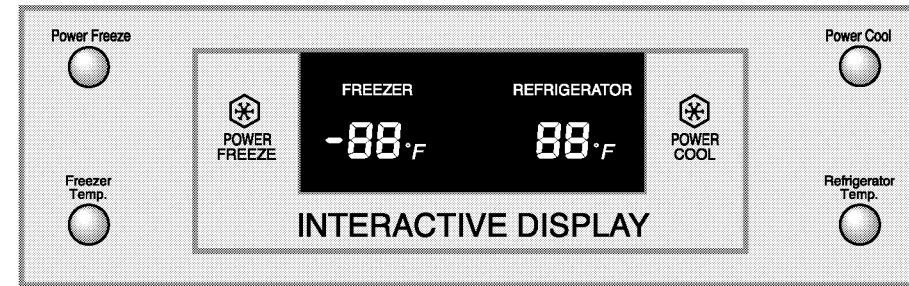

9-2) Temperature Control Function

When the system power is initially engaged, the default set temperature are -2°F for the freezer and 38°F for the set refrigerator, respectively. The numbers shown on the digital display panel stand for the actual compartments temperatures. When the compartment temperatures go down, so do the numbers on the display panel, and finally they reach the set temperatures. Once the system is stabilized, the display temperatures are the set temperature.

1) Freezer Temperature Control.

To select a set temperature, press the Freezer Temp. button. The display shows the set temperature from -14°F to 8°F in sequence.

2) Refrigerator Temperature Control.

To select a set temperature, press the Refrigerator Temp. button. The display shown the set temperature from 34°F to 46°F in sequence.

note) Because of the temperature sensor sensitivity, the refrigerator can be under and/or over cooled when the air flow is blocked by stored foods. (Temperature range of the sensor : 15°F~80°F)
In the event of a power failure, if the freezer temperature is maintained lower than 41°F, the last selected set temperature and functions memorized in EEPROM will be restored when the power is on.

9-3) Power Freeze Function and Power Cool Functions.

- Select the Power Freeze or Power Cool buttons separately.
- These buttons are toggled ON and OFF and the indicators as well.
- Although you select Power Freeze or Power Cool, the set temperatures in the freezer and refrigerator are not changed.
- The set temperatures for the compartments can be changed while these functions are in use.

1) Power Freeze function


- 1-1) When you press the Power Freeze button, the LED indicator lights right away, but there is 10 seconds lag time to an actual operation. When this button is pressed again, the Power Freeze function stops and the indicator is off immediately.
- 1-2) If you select Power Freeze, both the compressor and the freezer fan run for 2 ½ hours continuously.
- 1-3) During Power Freeze, the freezer retains the current settings.
- 1-4) When Power Freeze expires, the indicator goes off and the freezer set temperature will be restored.

2) Power Cool function


- 2-1) Power Cool operation and the indicator work exactly same as the Power Freeze function.
- 2-2) When Power Cool is selected, COMP and R-FAN operate continuously until the refrigerator reaches 25°F. This function will be terminated after 2 ½ hr running.

Diagnostics

2) If beep sounds continuously

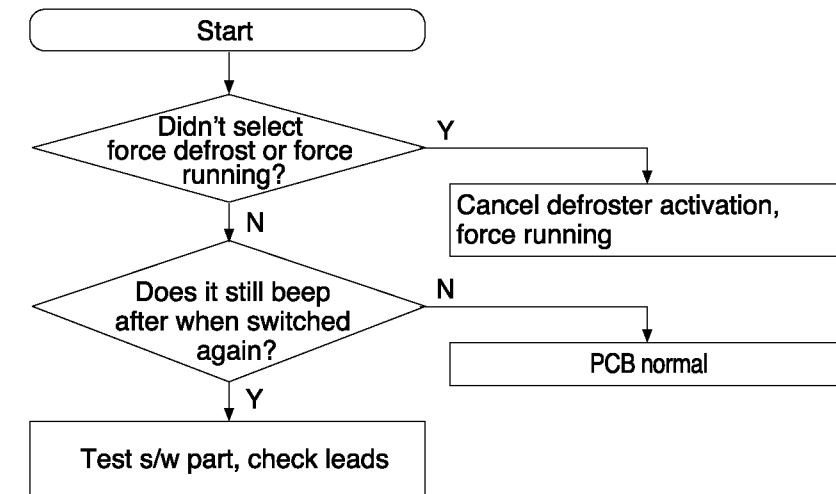

3) When the digital panel PCB does not light

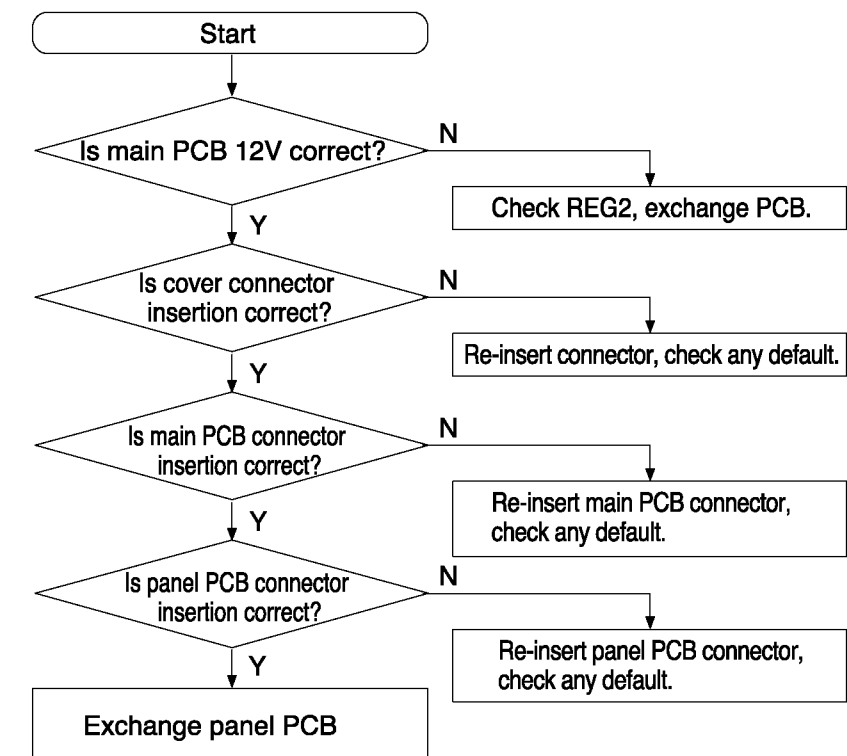


Diagnostics

11-8) Alarm continuously

Pre-check

1. Alarm begins after 2 minutes when the door is open and runs in every 2 minutes.
2. If the door is not closed properly, MICOM will indicate that the door is open, and alarm continues. If the alarm goes for 10 minutes, the light in the compartment will be off and not be on in the situation that the door opens.

- 1) If melody sounds continuously

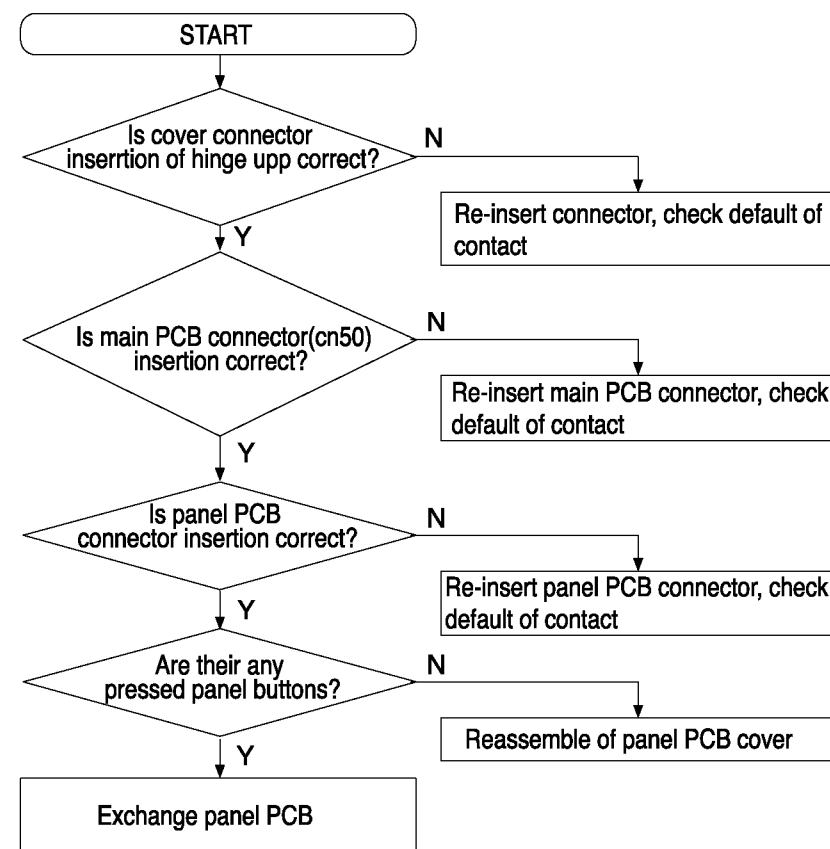

Operation Function

- 3) When you select Power Freeze and Power Cool together
Each function works at the same time. The COMP and F-FAN run continuously and the R-FAN runs until 25°F in the refrigerator.
- 4) Initial Power-On
 - 4-1) When the freezer and the refrigerator temperatures are higher than 14°F and 50°F, respectively, if Power Freeze is selected, then the R-FAN will be off. If Power Cool is selected, then the F-FAN will be off.
 - 4-2) When both functions are selected, there is no benefit of fast cooling for each compartment.

9-4) Sound Function

- 1) Sound function
 - 1-1) To make sure a command input, whenever a button is pressed, a “ding-dong” sounds.
 - 1-2) When two or more buttons are pressed simultaneously or if a wrong button is pressed, there is no sound.
- 2) Door Open Alarm
 - 2-1) When the doors remain open for 2 minutes, there are 10 times beeps.
 - 2-2) If the doors continue to remain open more than 2 minutes, the additional 10 beeps interval will change to 1 minute.
 - 2-3) The beeps will cease immediately when the doors are closed.

9-5) Defrost Function

- 1) A defrost is determined based on the accumulated compressor on-time.
- 2) When the power is engaged for the first time, the defrost cycle for the freezer and the refrigerator will begin after 4 hours of the accumulated compressor on-time.
- 3) A defrost interval depends on the ambient temperature, the number of door openings, and the door open time.
- 4) The defrost cycle is composed of a pre-cool process (F-Fan and COMP) for 30 minutes, a heating process, and a resting for 8-12 minutes to drain.
- 5) A minimum interval is 6 hours and a maximum is 11 hours for the refrigerator, and 12 hours and 22 hours for the freezer, respectively.
- 6) When the system runs only for the refrigerator (R-Fan and COMP) and if the refrigerator can not reach the set temperature within 2 hours, an R-defrost process will begin.
- 7) After the 6) process, when the compressor on-time reaches 4 hours, R-,F-defrost will begin simultaneously.
- 8) If a defrost cycle occurs during Power Freeze operation, the defrost cycle will begin after the completion of Power Freeze operation.

Operation Function

9-6) Forced Operation function (Power cool key + Refrigerator Temp 8sec.)

- This function enables a pull-down mode, a defrost mode for the refrigerator only, a defrost mode for the freezer, and a cancellation of this function.
- Press Power Freeze and Refrigerator Temp. buttons for 8 seconds simultaneously to get in the ready mode for a forced operation.
- The display panel will return to normal after 15 seconds in the ready mode.
- At the ready mode, press any button once to start a pull-down operation, twice for a defrost cycle for the refrigerator, three times for a defrost cycle for the freezer and the refrigerator, and finally four times for cancellation of this function.
- Another way to cancel this function is to simply plug out and in the power cord.

1) Pull-down Operation

- 1-1) At the ready mode, press any button once then the buzzer will beep (ON for 1/2 second and OFF for 1/2 second) until this mode is cancelled.
- 1-2) At this pull-down mode, the compressor will start immediately (No 5 minute delay) and if the system is in the defrost cycle, it will be cancelled right away.

note) If this pull-down mode begins right after the compressor was off, the compressor may not start to run due to an overload condition.

- 1-3) At this mode, the compressor and freezer fan will operate continuously for 24 hours and the refrigerator fan will be on and off according to the set temperature(34°F)
- 1-4) After 24 hour operation, the system will be cycled at -14°F for the freezer and 34°F for the refrigerator.
- 1-5) In order to cancel this mode at any time, select the next mode on the ready mode or power off the system.


2) Defrost operation

- 2-1) At the pull-down mode, press any button again on the ready mode to begin the defrost cycle for the refrigerator.
- 2-2) The beep sound continues for 3 second at the beginning, then ON for 3/4 seconds and OFF for 1/4 second until this mode cease.
- 2-3) After this operation, the system will come back to normal operation.
- 2-4) At this mode, press any button again on the ready mode to operate the defrost cycles for both compartments.
- 2-5) The beep sound continues for 3 seconds at that time, then ON for 1/4 second and OFF for 3/4 seconds until the defrost operation cease.

3) Cancellation

- 3-1) At the R,F-Defrost mode, press any button again on the ready mode to return to a normal operation.
- 3-2) Simply unplug the power cord, then plug it again to return to a normal operation.

Diagnostics

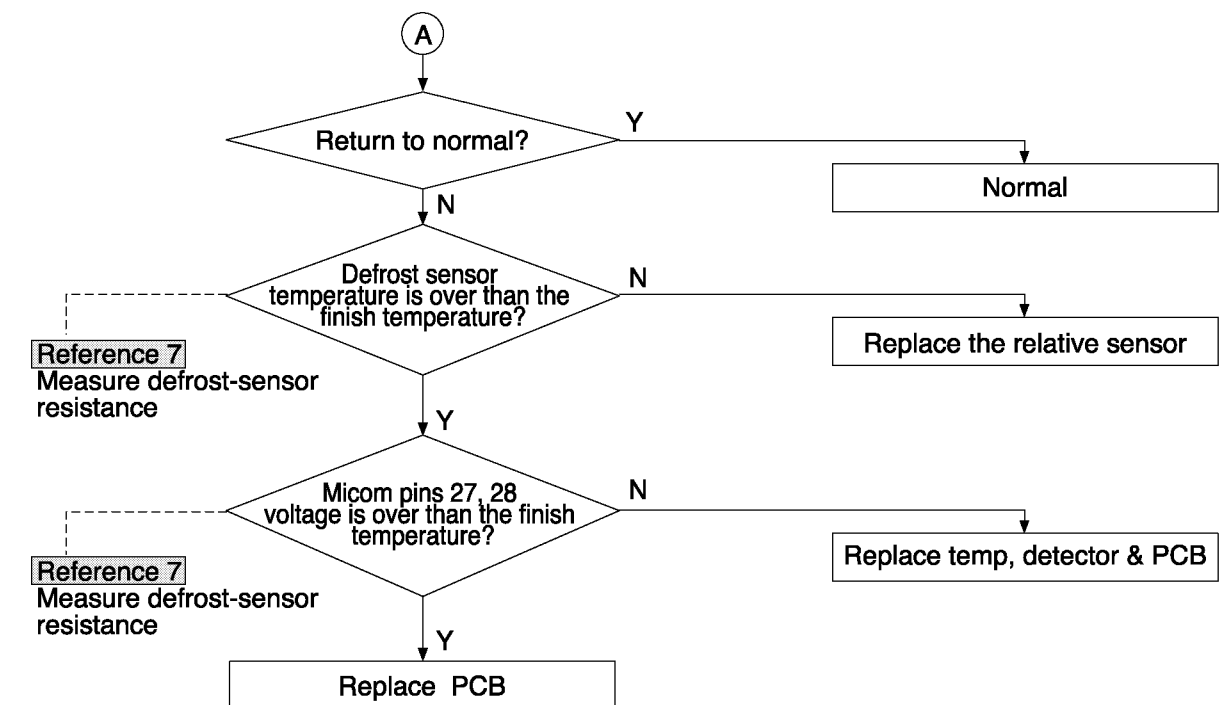


Diagnostics

11-7) No defrosting

Pre-check

1. Although both F • R-defrost sensors have short-circuit, a normal operation continues without a defrost cycle (Refer to self - diagnostics function)
2. When the temperature fuse is open, there is no heating and a defrost occurs naturally by the compartment temperature increase and eventually, it will cause a blinking of temperature.
3. When both F • R-defrost sensors are open, heating does not end. The compressor remains off and a temperature fuse will be open. (Refer to self-diagnostics function.)

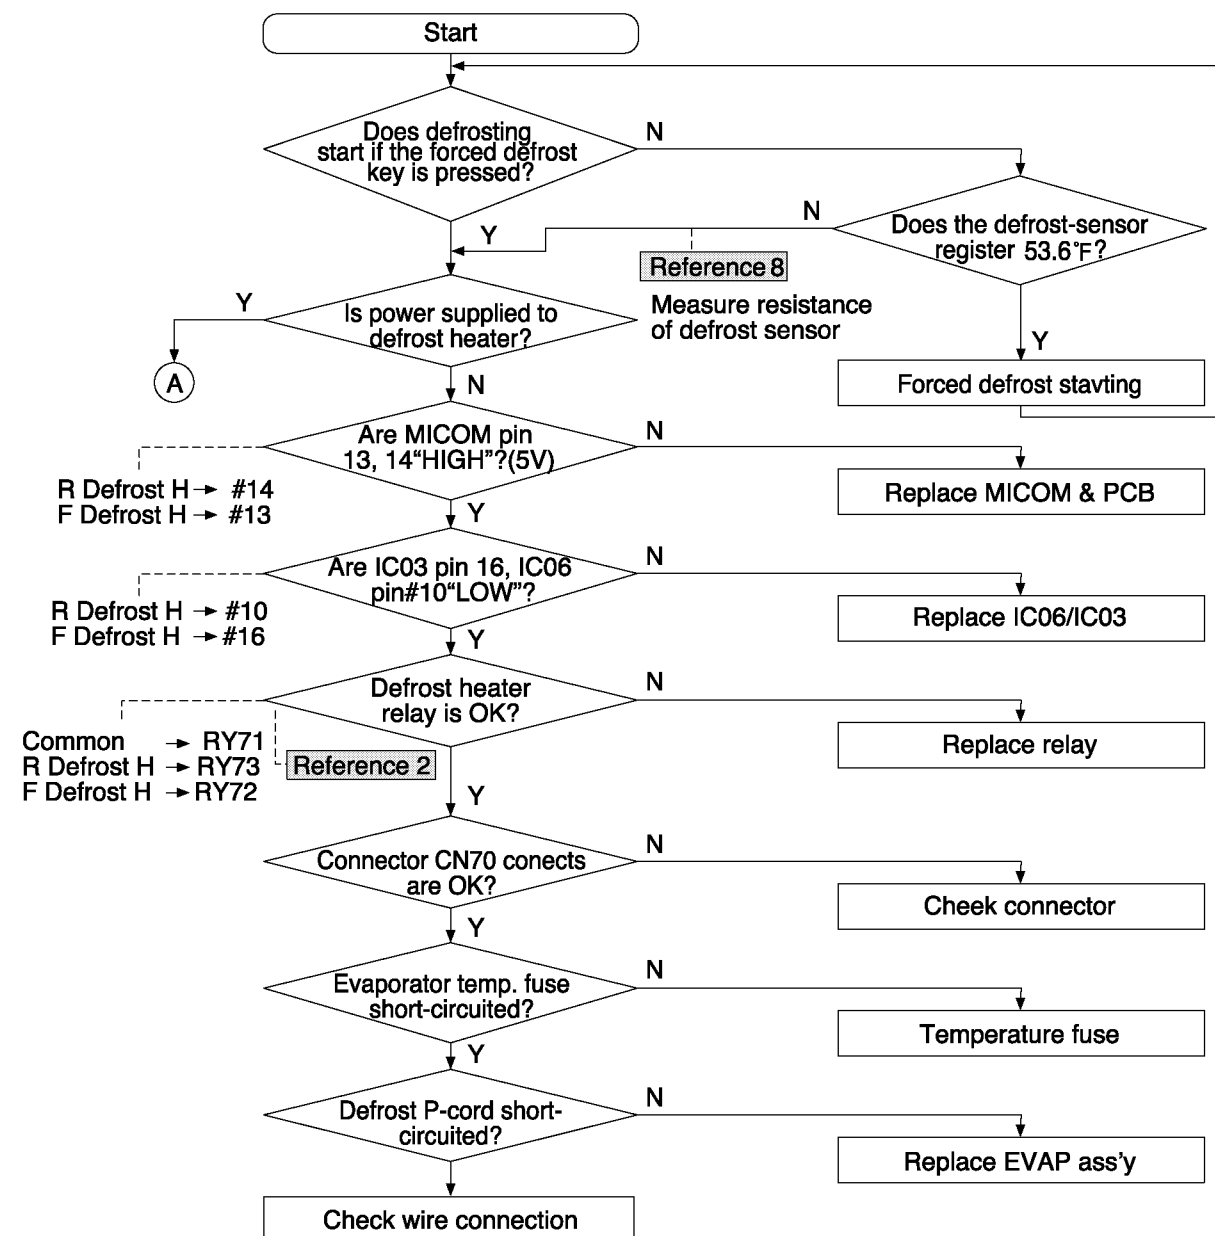

Operation Function

9-7) Power failure compensating function

- 1) When the freezer temperature is lower than 50°F, all functions on the display panel will be restored.
- 2) When the freezer temperature is higher than 50°F, all functions will be initialized.
(2°F for the freezer, 38°F for the refrigerator, and Cubed for the Ice Type)

9-8) Exhibition Function

- 1 This function is for a display purpose on the floor of show room or store.
- 1) Mode ON/OFF
 - 1-1) For the exhibition mode, press Power Freeze and Freezer Temp. buttons simultaneously for 5 seconds until a "ding-dong" sounds.
 - 1-2) Press the same time buttons again for 5 seconds to cancel this mode put with a "ding-dong" sound.
 - 2) Operation
 - 2-1) Most of the system function except the compressor operation are working properly.
 - 2-2) There is no defrost cycle in this mode.

9-9) Self-Diagnostics function

- 1) Self-Diagnostics in the initial Power ON
 - 1-1) The control board performs a self diagnostics test within 1 second and check out the temperature sensors abilities.
 - 1-2) If a sensor failure occurs, a corresponding LED segment will blink.
 - 1-3) When a LED segment blinks, only the cancellation function (Press Power Freeze and Power Cool buttons simultaneously for 8 seconds) is acceptable.
 - 1-4) After a replacement of bad sensor or a cancellation of this function, this self diagnostics will end.
- 2) Self-Diagnostics in the normal operation
 - 2-1) To select this function, press Power Freeze and Power Cool buttons simultaneously for 5 seconds with an audible tone.
 - 2-2) In the self diagnostic mode, only corresponding LED segments will be illuminated (see the check list on)
 - 2-3) After a 30 second illumination of error signal, the system will return to the normal operation.

Operation Function

Table 1. Display table of self diagnosis.


No	Item	LED Display	Details	Remarks
1	R-sensor	REFRIGERATOR 5	• Connector contact failure • Short-circuit	• Suspected to be below -58°F • Suspected to be over 150°F
2	R-defroster sensor	REFRIGERATOR d	• Connector contact failure • Short-circuit	• Suspected to be below -58°F • Suspected to be over 150°F
3	Outer sensor	FREEZER ES	• Connector contact failure • Short-circuit	• Suspected to be below -58°F • Suspected to be over 150°F
4	F-sensor	FREEZER FS	• Connector contact failure • Short-circuit	• Suspected to be below -58°F • Suspected to be over 150°F
5	F-defroster sensor	FREEZER dS	• Connector contact failure • Short-circuit	• Suspected to be below -58°F • Suspected to be over 150°F

9-10) Component Load Operation Function

- 1) In the normal operation, press Power Freeze and Power Cool buttons simultaneously for 3 second, then the display panel will blink for 2 seconds.
- 2) Press Refrigerator Temp. button to get into this check mode with an audible tone.
- 3) Each illuminating LED segment stands for the component which has an output signal from the control board.
- 4) This mode will terminate automatically after 30 seconds.


Diagnostics

11-6) If the compressor cooling fan motor doesn't work

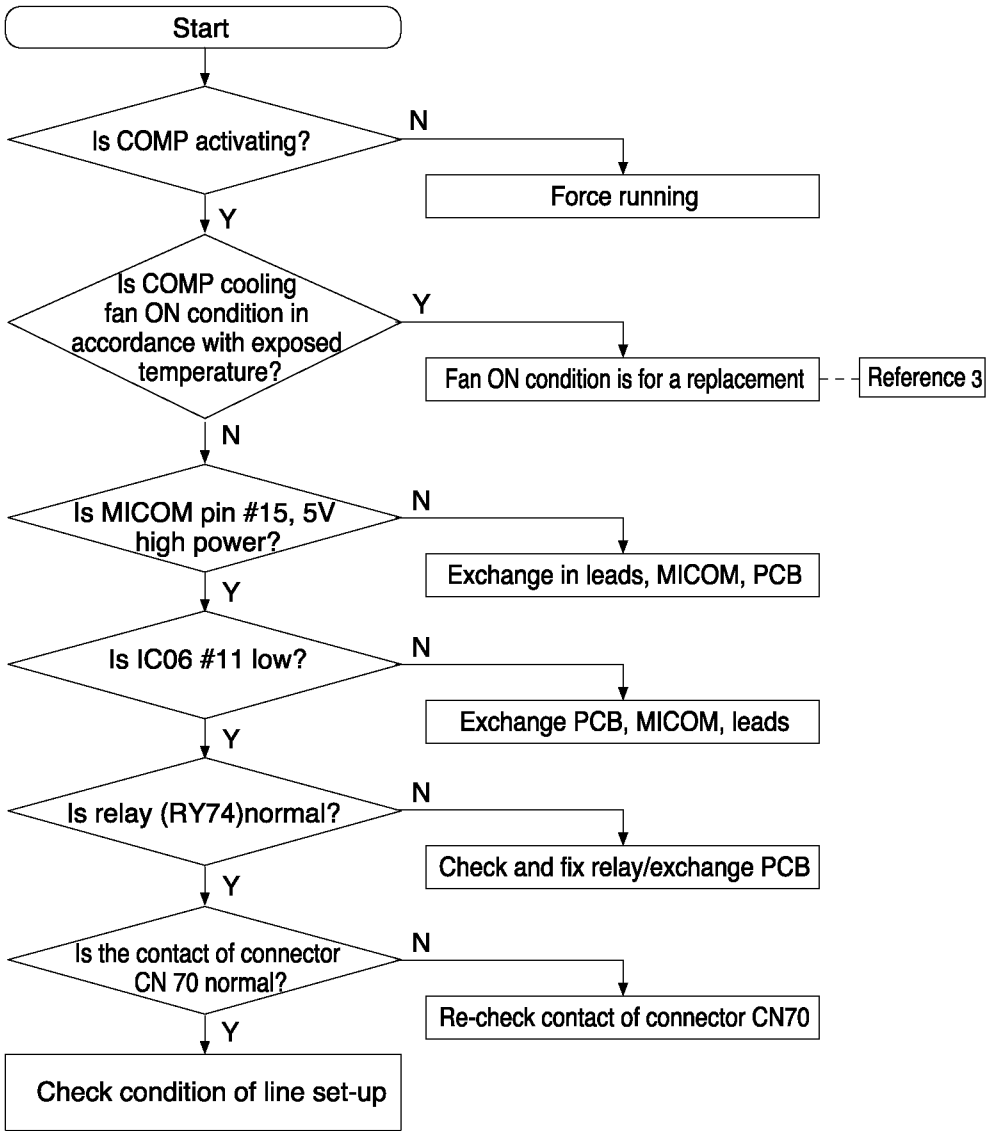

Diagnostics

11-5) If the refrigerator fan doesn't work

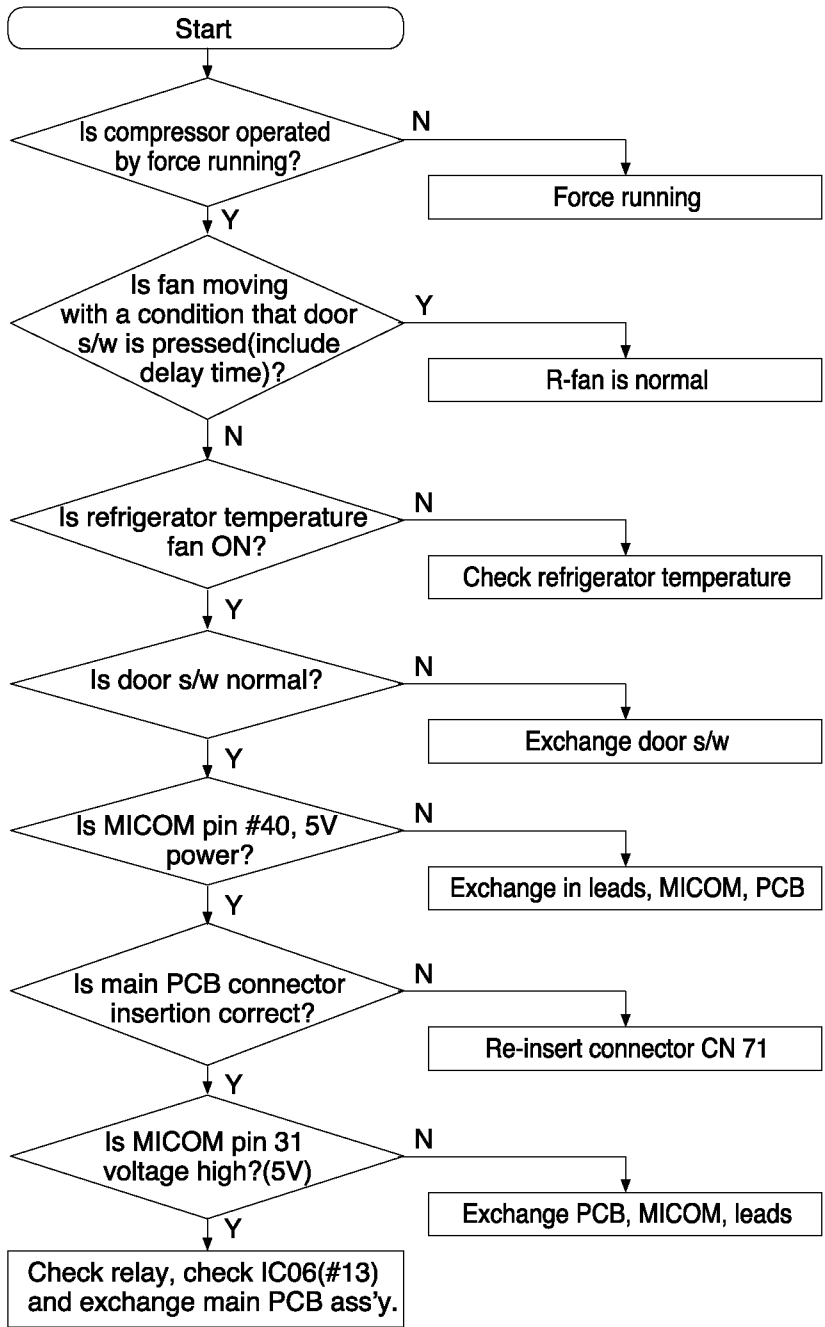

Operation Function

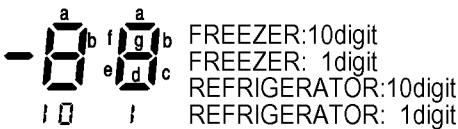


Table 2. Display table of the presently operating parts.

No	Content	Display LED	Operation	Remark
1	R-fan	a : REFRIGERATOR 1 digit	Include R-fan activation	Ref. 6.button scan and display circuitry
2	R-defrost heater	c : REFRIGERATOR 1 digit	Defrost heater activation	
3	Initial start mode	d : REFRIGERATOR 1 digit	Initial power is activated ON	
4	Over load mode	e : REFRIGERATOR 1 digit	Outer temperature is over 95 °F	
5	Low temp.mode	f : REFRIGERATOR 1 digit	Outer temperature is below 68 °F	
6	Exhibition mode	g : REFRIGERATOR 1 digit	Exhibition mode is operated together	
7	Comp	a : FREEZER 1 digit	Led ON when COMP activation is included	
8	F-fan	b : FREEZER 1 digit	Led ON F-fan activation is included	
9	F-defrost heater	d : FREEZER 1 digit	Led ON when F-heater activation is included	
10	F-Lamp	a : FREEZER 10 digit	Led ON when F-lamp activation is included	
11	R-Lamp	b : FREEZER 10 digit	Led ON when R-lamp activation is included	

※ 3, 4, and 5 only explains the system operation states according to the ambient condition.

9-11) C-Fan Motor Delay Function of the Machine Compartment

According to the ambient temperature, the condenser fan located in the machine compartment is operated with different modes.

	Ranges of ambient temp.	Operation
C-FAN Delay function	Above 66 °F	C-FAN is ON as soon as the compressor is on.
	61 °F ~ 65 °F	C-FAN is ON with 5 minutes delay from the compressor on.
	Below 60 °F	C-FAN is OFF regardless of the compressor operation.

10. Circuit Descriptions

10-1) Source Power Circuit	27
10-2) Oscillator Circuit	27
10-3) Reset Circuit	28
10-4) Door S/W Sensing Circuit	28
10-5) Temperature Sensing Circuit	29
10-6) Key Scan and Display Circuit	30
10-7) Load Drive Circuit	31
10-8) Option Circuit	32

Diagnostics


11-4) If cooling fan doesn't work

Pre-check

Select a pull-down mode from the forced operation function

1. When COMP is OFF both freezer and the refrigerator cooling fans and COMP cooling fan remain OFF.
2. When COMP is ON, the refrigerator fan is not always ON and when the refrigerator temperature reached a set temperature, the fan goes OFF.
3. When both the freezer and the refrigerator doors are closed, each fan has a delay time (5sec ~ 1 min) and then begins to run. (COMP ON condition)

4-1) When freezer fan (F-fan) do not operate

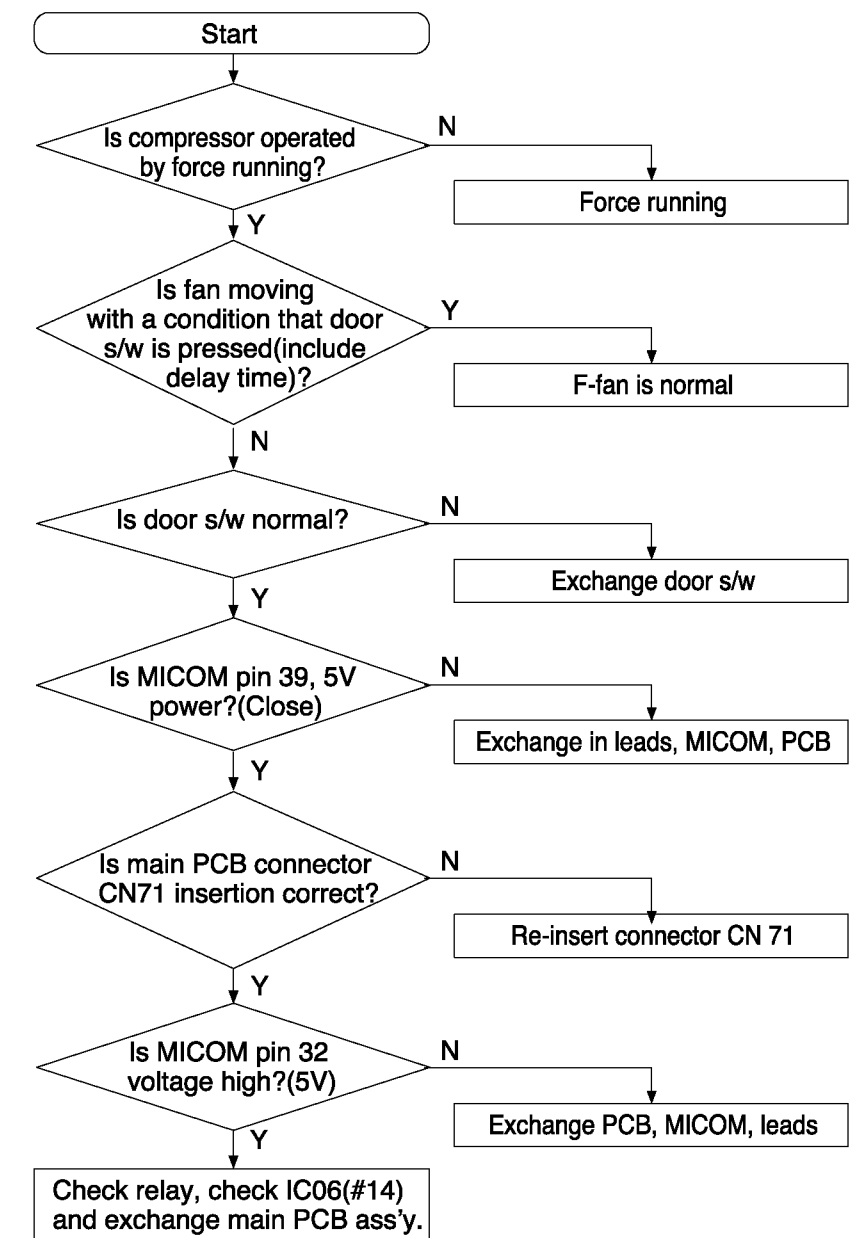


Diagnostics

11-3) If the compressor is not working properly


Pre-check


- 1. A compressor does not operate within 5 minutes after compressor is OFF.
- 2. A compressor does not run during defrost period
- 3. A compressor does not run because a low temperature is detected if freezer and the refrigerator sensor are not connected.

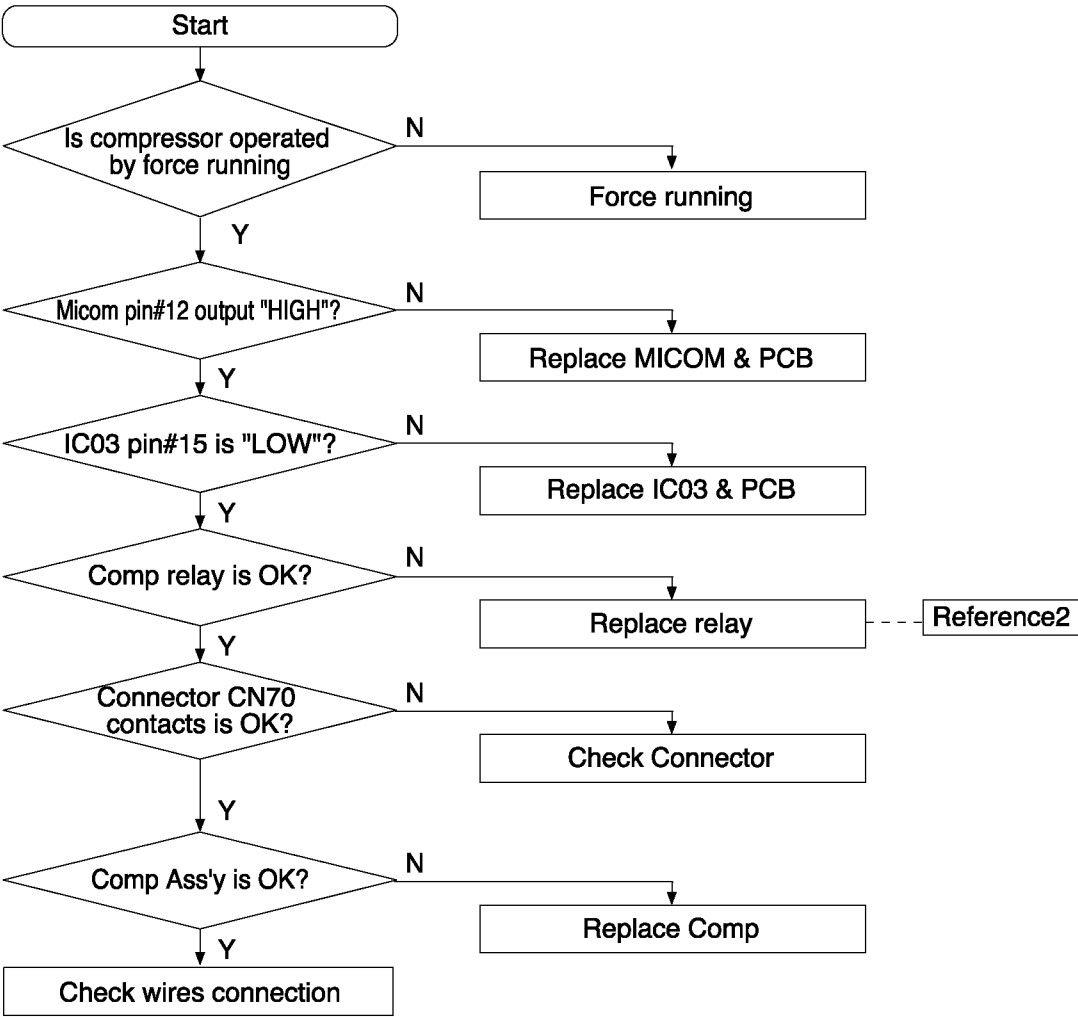

Circuit Descriptions


10-1) Source Power Circuit

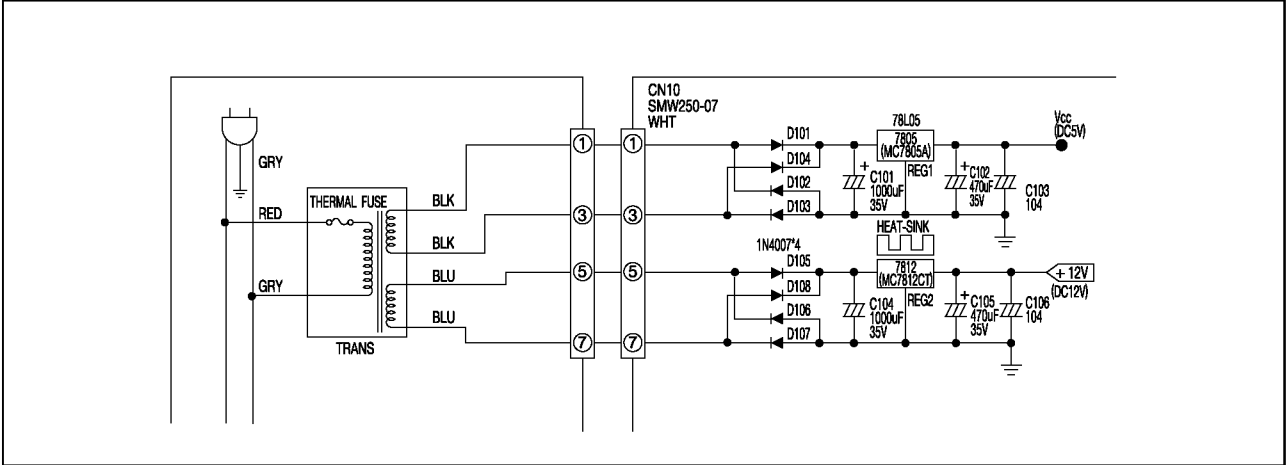

Voltage		Circuit used
	+12 (DC 12V)	Relay Operation & LED Display
	Vcc (DC 5V)	Power around MICOM & Sensor Detector

- 1) The input AC voltage drops to AC 8 volts on the transformer secondary side between ① ~ ③ at CN 10. The rectified voltage passed through D101 ~ 104 becomes DC 5V through voltage regulator MC7805(REG1). This (DC5V) is supplied to the control board and sensor's circuits.
- 2) The input AC Voltage drops to AC 15 volts on the transformer secondary side between ⑤ ~ ⑦ at CN 10. The rectified voltage passed through D105 ~ D108 becomes DC 12V through voltage regulator MC7812CT (REG2). This (DC12V) is supplied to the relay operation and LED display.

10-2) Oscillator circuit

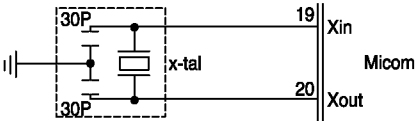


Port	Oscillating Frequency
Xin(#19)	4.00MHz
Xout(#20)	4.00MHz

±0.5% Error

It is designed for clock generation and time calculation for synchronizing transmission and reception on the logic elements inside the MICOM. If the X-TAL specification changes, MICOM may make an error.
(The standard components should be used.)

Circuit Descriptions


10-3)Reset Circuit

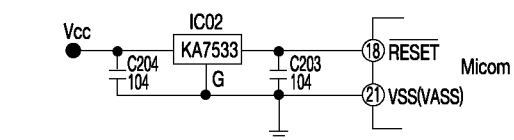

Port	Voltage
Vcc	DC 5V
Reset	DC 5V

When the power is supplied to MICOM, the reset circuit initializes RAM and other sectors of MICOM. A reset voltage maintains “low” for hundreds of μ sec comparing to MICOM Vcc voltage when the power is in. It also maintains “high”(5V) during normal operation. But, when Vcc drops to 3.4V-3.7V, a reset port becomes “low”.

10-4) Door S/W Sensing Circuit

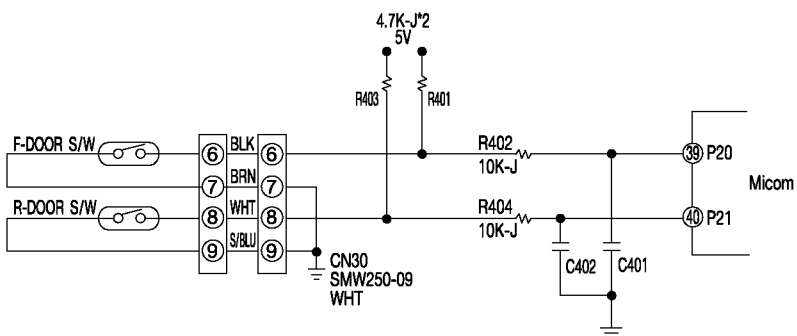


DOOR	Door Conditions	Door S/W Contact	MICOM PIN NO	Micom Input Voltage
F	CLOSE	OPEN	# 39	“HIGH”
	OPEN	CLOSE		“LOW”
R	CLOSE	OPEN	# 40	“HIGH”
	OPEN	CLOSE		“LOW”

- 1) If a door is open, the door S/W contact is closed. Then MICOM receives “low” signal and detects door open, A relay control circuit receives “HIGH” signal and turn Lamp on.
- 2) If a door is closed, the door S/W contact is open. Then MICOM receives “high” signal and detects door close, A relay control circuit receives “LOW” signal and turn Lamp off.


Diagnostics

5) If the defrost sensor of the freezer has trouble.

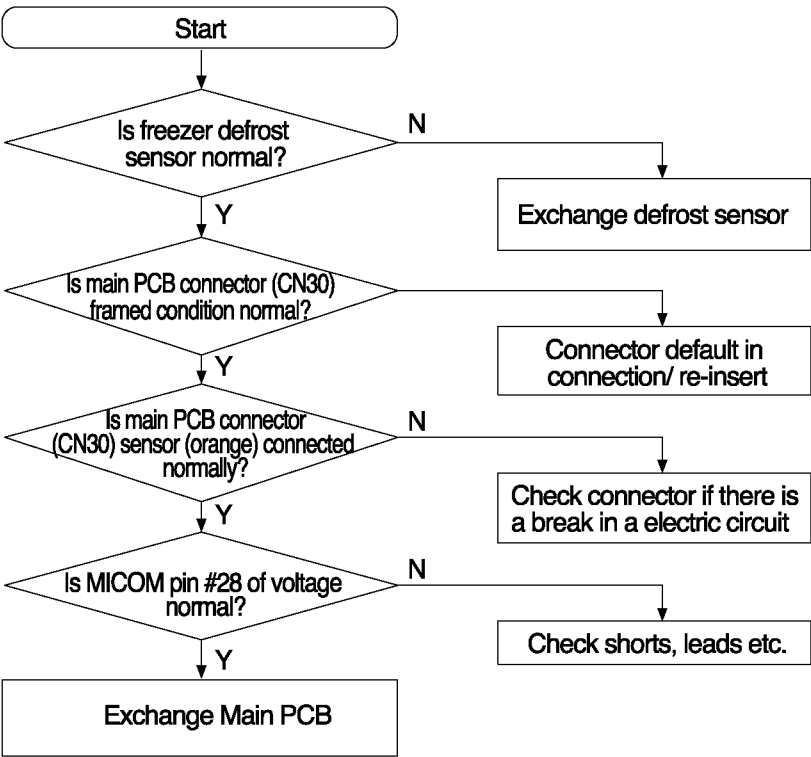


Diagnostics

3) If the defrost sensor of the refrigerator has trouble.

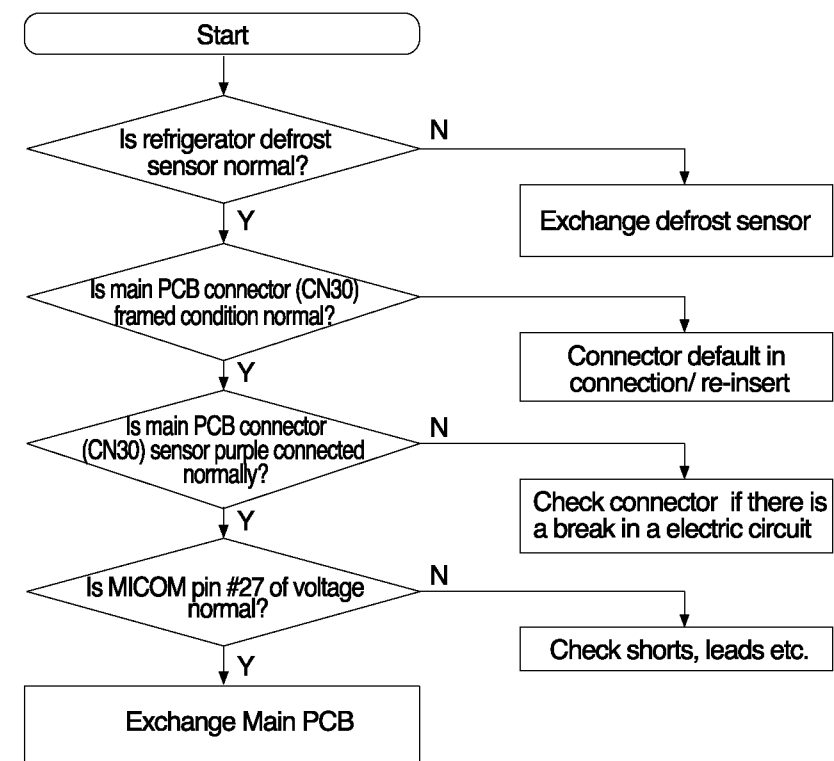


4) If the temperature sensor of the freezer has trouble.

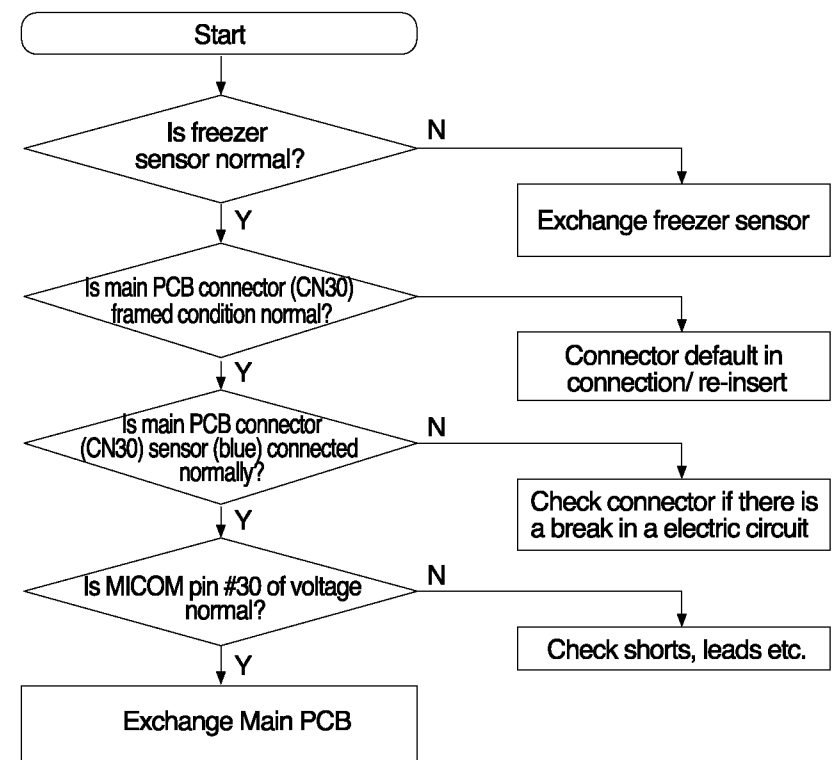

Circuit Descriptions

10-5) Temperature Sensing Circuit

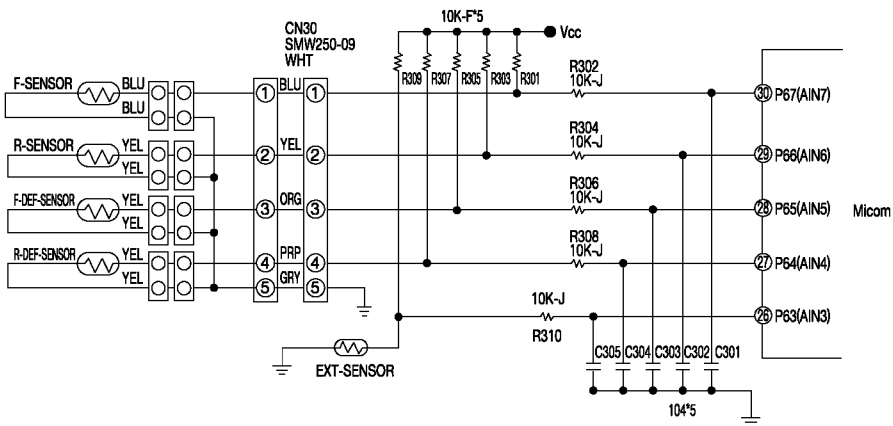


(Air Sensor)

When Sensor is open	When sensor is cut off
MICOM input “HIGH”	MICOM input “LOW”


- 1) The sensor uses the characteristics of thermistor. If temperature goes higher, resistance goes lower. On the contrary, if temperature goes lower, resistance goes higher.
- 2) A MICOM input voltage is calculated by sensor as follows.
$$V_F = \frac{R_{TH}}{R_{TH} + R_{301}} \times V_{CC} \quad (V_{CC} : 5V, R_{TH} : \text{Sensor resistance})$$
- 3) For the resistance data corresponding to a temperature and a MICOM input voltage, please refer the conversion table on the back.

Circuit Descriptions

10-6) Key Scan and Display Circuit

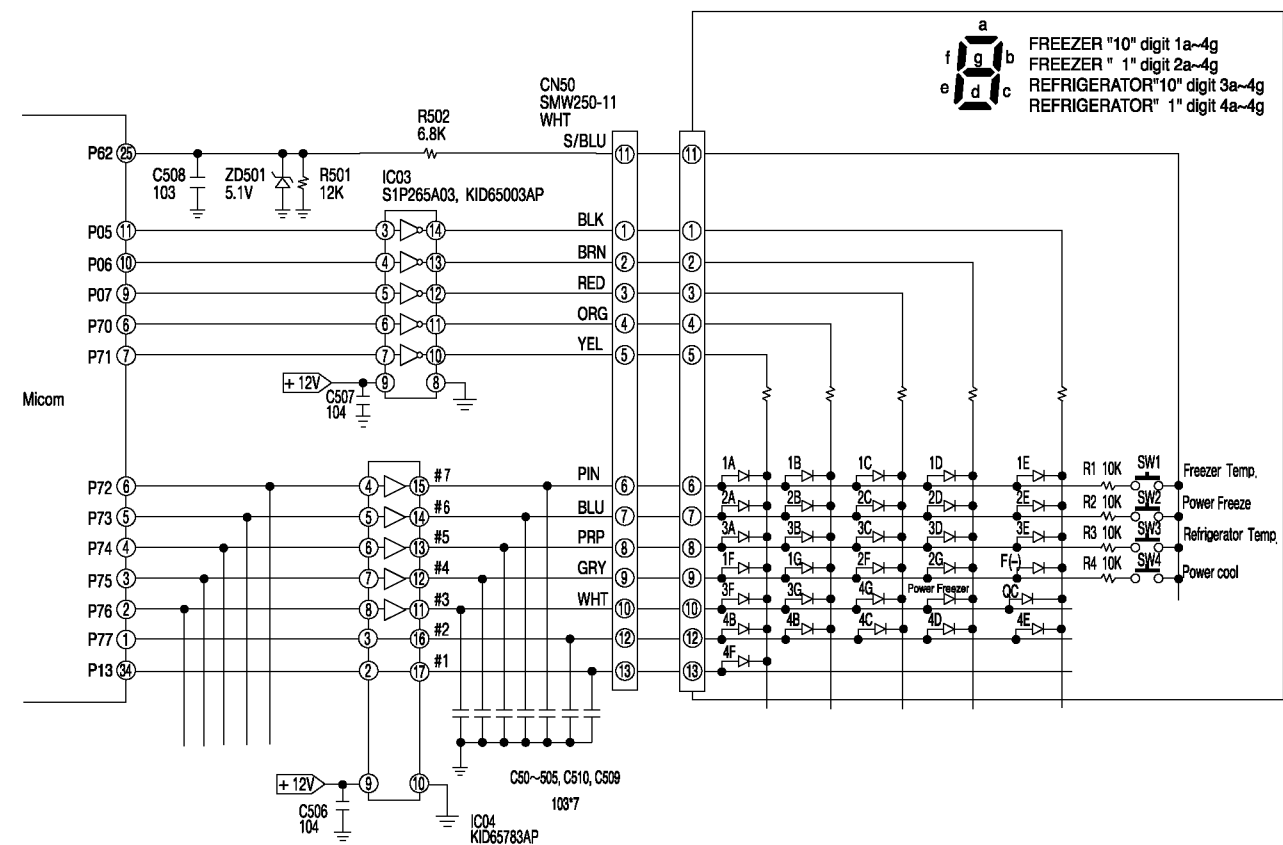


If the IC04 decoder(KID65783AD) receives signals from MLCOM pins(34-6), an output signal per 2 milliseconds comes out from Grid#1-#7. A step DC12 volt peak will be generated periodically as follows:

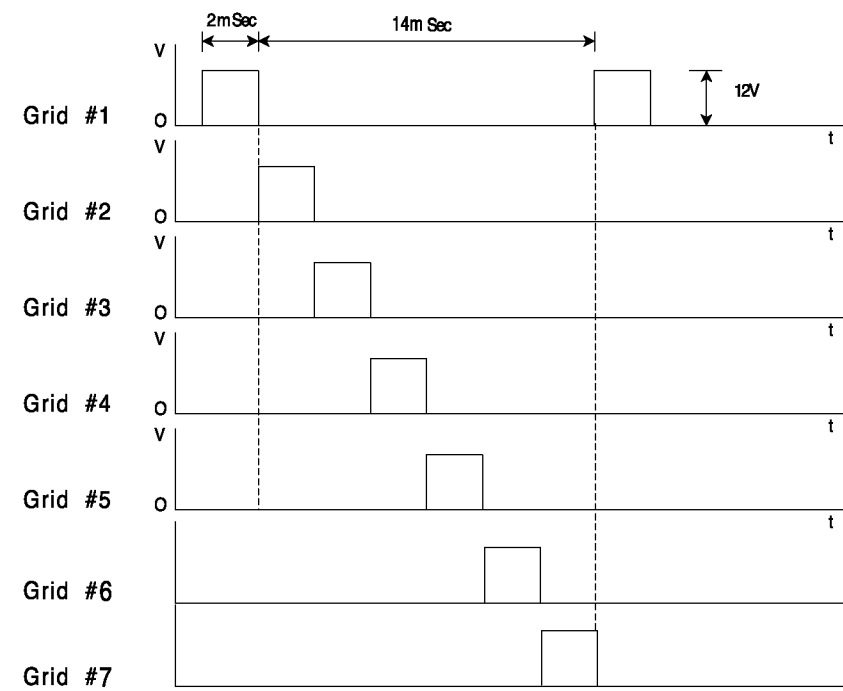


Diagnostics

11-2) If there is a trouble with self-diagnosis

1) If the ambient sensor has trouble.

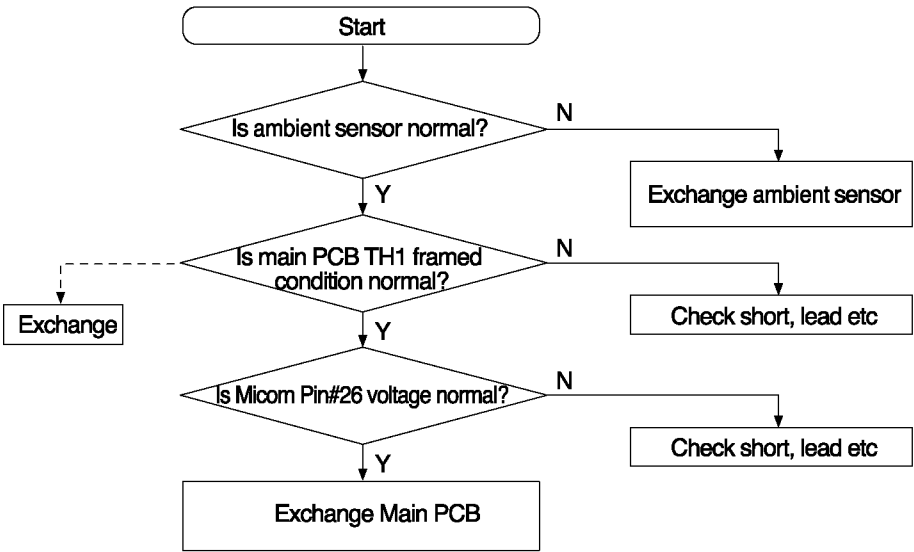

2) If the temperature sensor of the refrigerator has trouble.

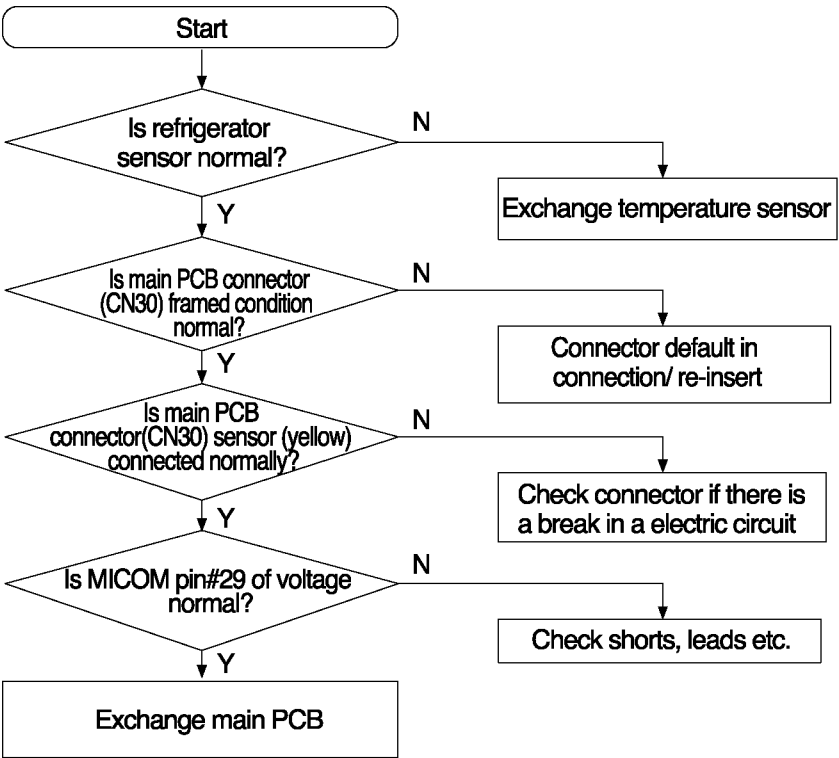


11. Diagnostics

11-1) If power is not ON

Caution!


At the power of main PCB, the 115V power and a high-voltage over DC 170V occur. Special care should be advised on repair and measurement.

To check the main PCB, please apply descriptions of operation and references in the manual.

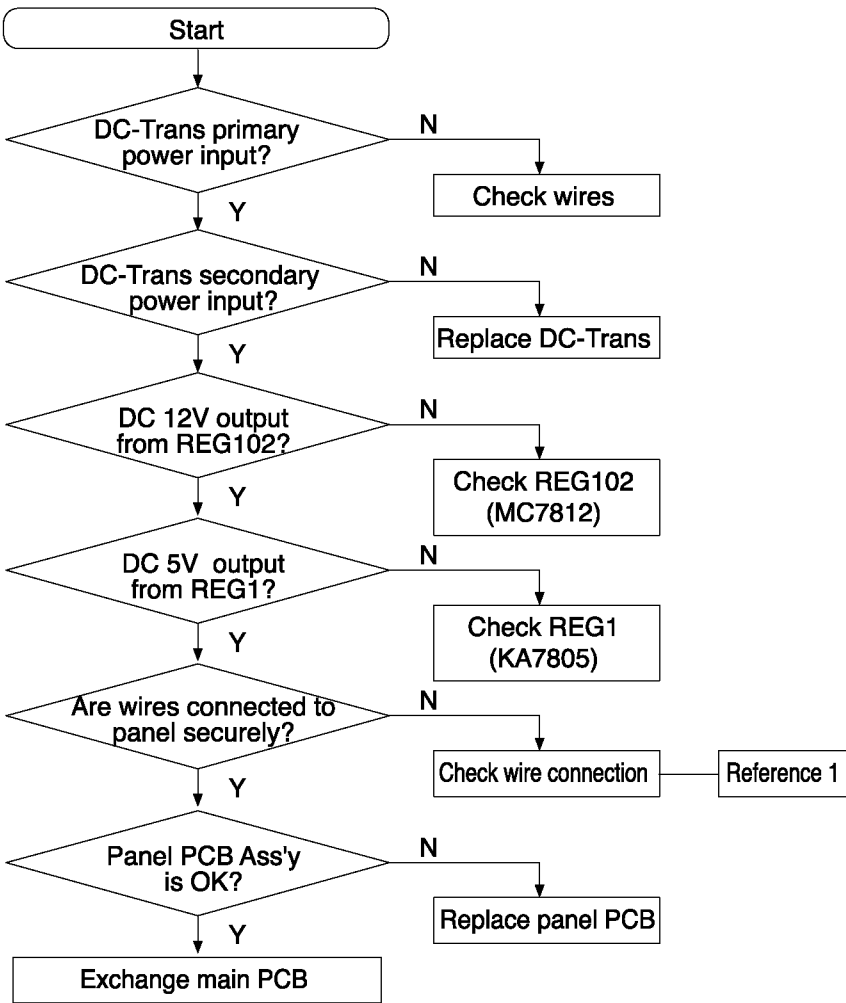

Circuit Descriptions

10-7) Load Drive Circuit

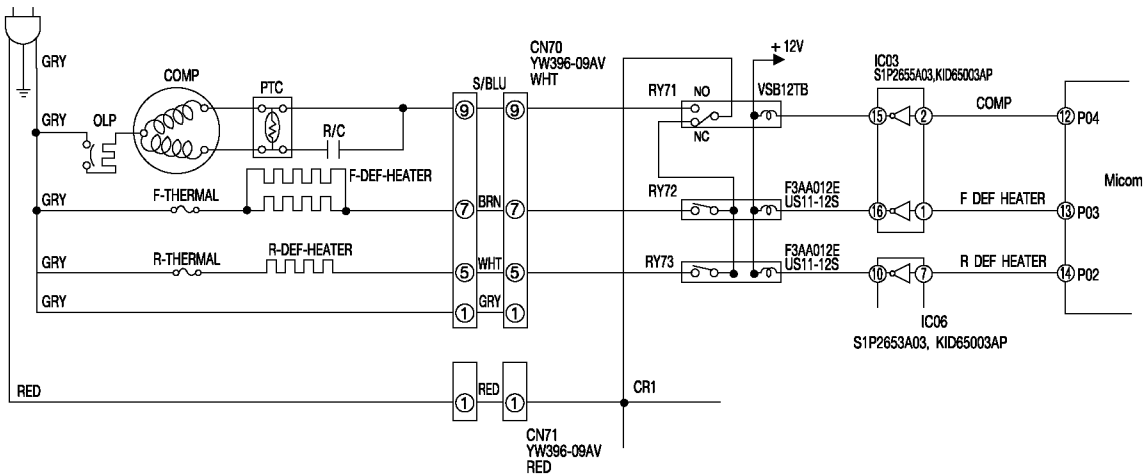


- 1) Most of relays can control the compressor, heaters and several option functions.
- 2) For the compressor, #12 pin of MICOM signals HIGH(5V). This signal enters to #2 of IC03 and #15 of output terminal will be on and grounded. When the relay RY71 is switched to NO terminal a 115V power is supplied to the compressor. If MICOM outputs LOW(0V), the compressor will stop.
- 3) If the RY71 is connected to NC, RY72 and 73 for defrost heaters will be on and corresponding heater.

RELAY		Load	Remark
COMP	Defrost Heater		
on	off	Comp Operation	Defrost-Heater Power Off
on	on	Comp off, Defrost-Heater Off	
off	on	Defrost-Heater On	Comp Power Off
off	off	Comp Off, Defrost-Heater Off	

Will be activated according to the signal from MICOM. Like the above block diagram, operation of F, R defrost heater is determined by the operation of the relay for COMP.

Circuit Descriptions

10-8) Option Circuit

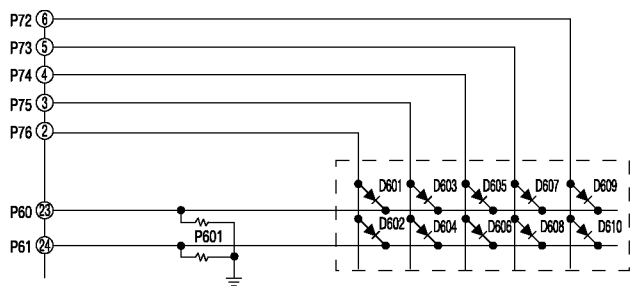

Temperature and function values can be abjustable by using main PCB switching diode.

- Note : the values have been preset in factory. If is recommended not to change the value arbitrarily.
- When the option function is modified, a power should be turned off and on, again.

1) Freezer Temperature Shift (Unit °F)

SHIFT	D601	D602	D603
Reference	-	-	-
-1.0	-	-	●
-2.0	-	●	-
-4.0	-	●	●
-6.0	●	-	-
+2.0	●	-	●
+4.0	●	●	-
+6.0	●	●	●

2) Refrigerator Temperature Shift (Unit °F)

SHIFT	D604	D605	D606
Reference	-	-	-
-1.0	-	-	●
-2.0	-	●	-
-4.0	-	●	●
-6.0	●	-	-
+2.0	●	-	●
+4.0	●	●	-
+6.0	●	●	●

Circuit Descriptions

